

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.


CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

PARTS LIST

NO.	COMPONENT	QTY.
P1	TABLE TOP	1
P2	TRESTLE LEG FRAME	2
P3	TOP RAIL	1
P4	TRESTLE STRETCHER	1
P5	ANGLED STRETCHER	2


HARDWARE LIST

NO.	DESCRIPTION	QTY.
H1	M6 x 35 JCBC SCREW	8
H2	BOLT & NUT 1/2" φ X 4"	2
H3	M4 X 28 CSK SCREW	13
H4	ALLEN KEY	1

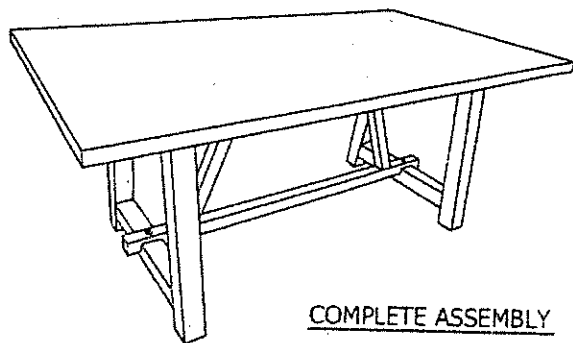


COMPLETE ASSEMBLY


STEP 1

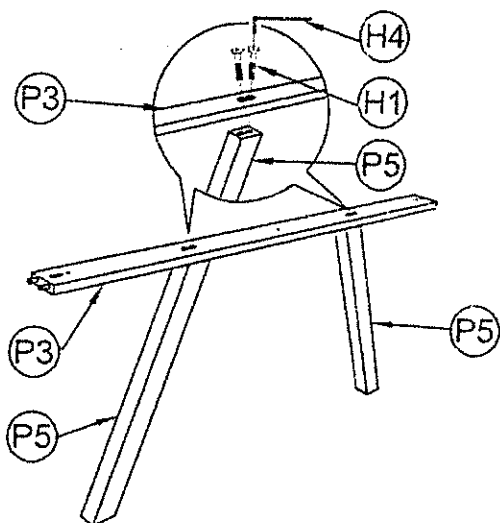

STEP 2

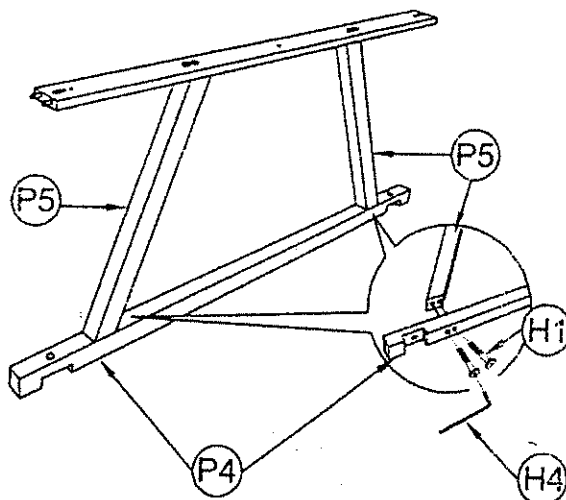

STEP 3

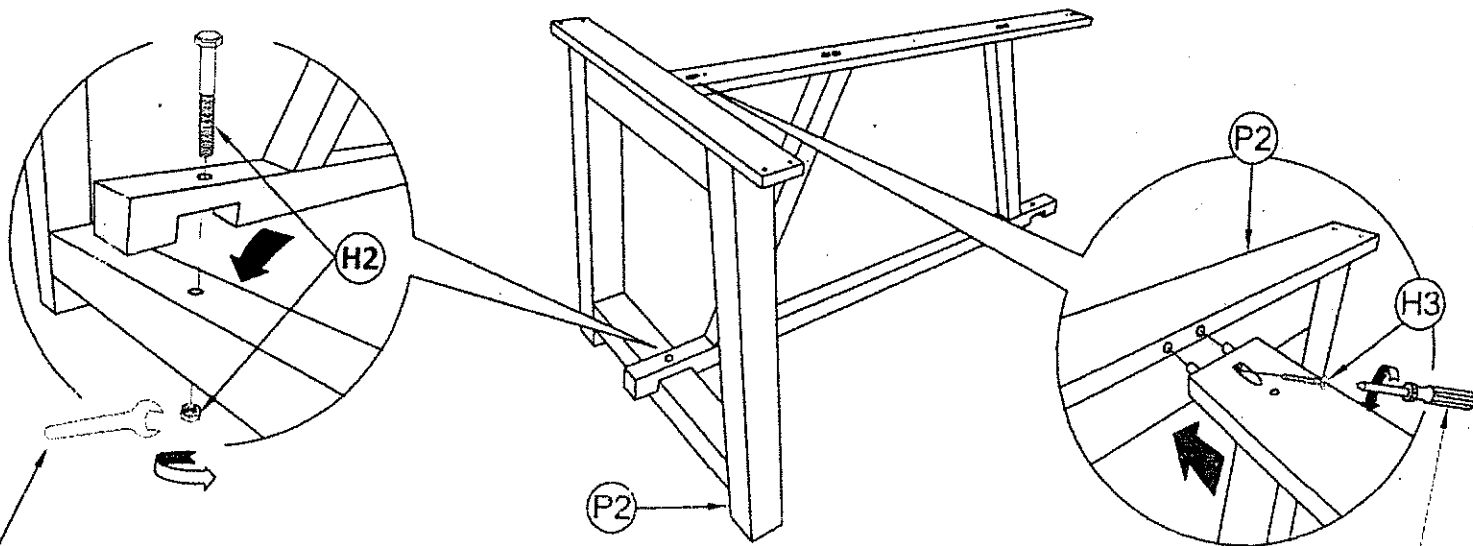


HOUSEHOLD WRENCH (not provided)


HOUSEHOLD SCREWDRIVER (not provided)

73030

STEP 4

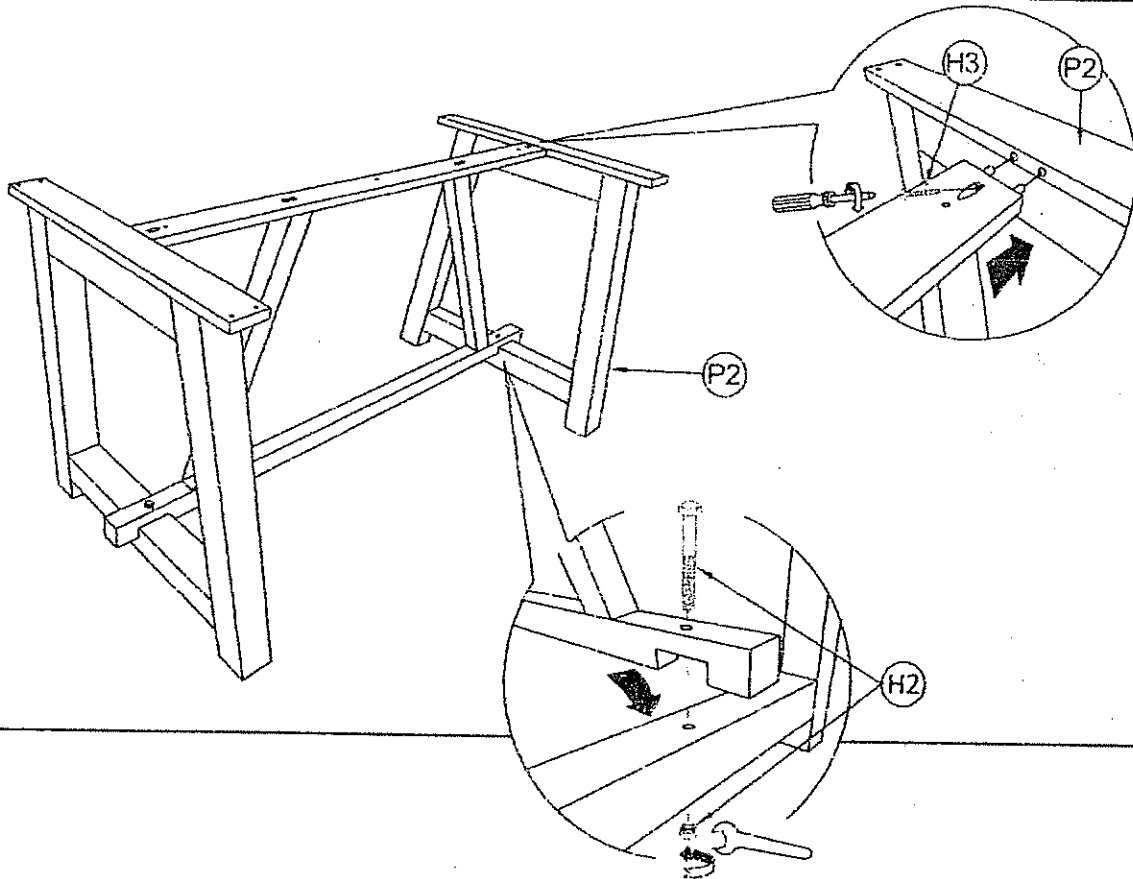

STEP 5

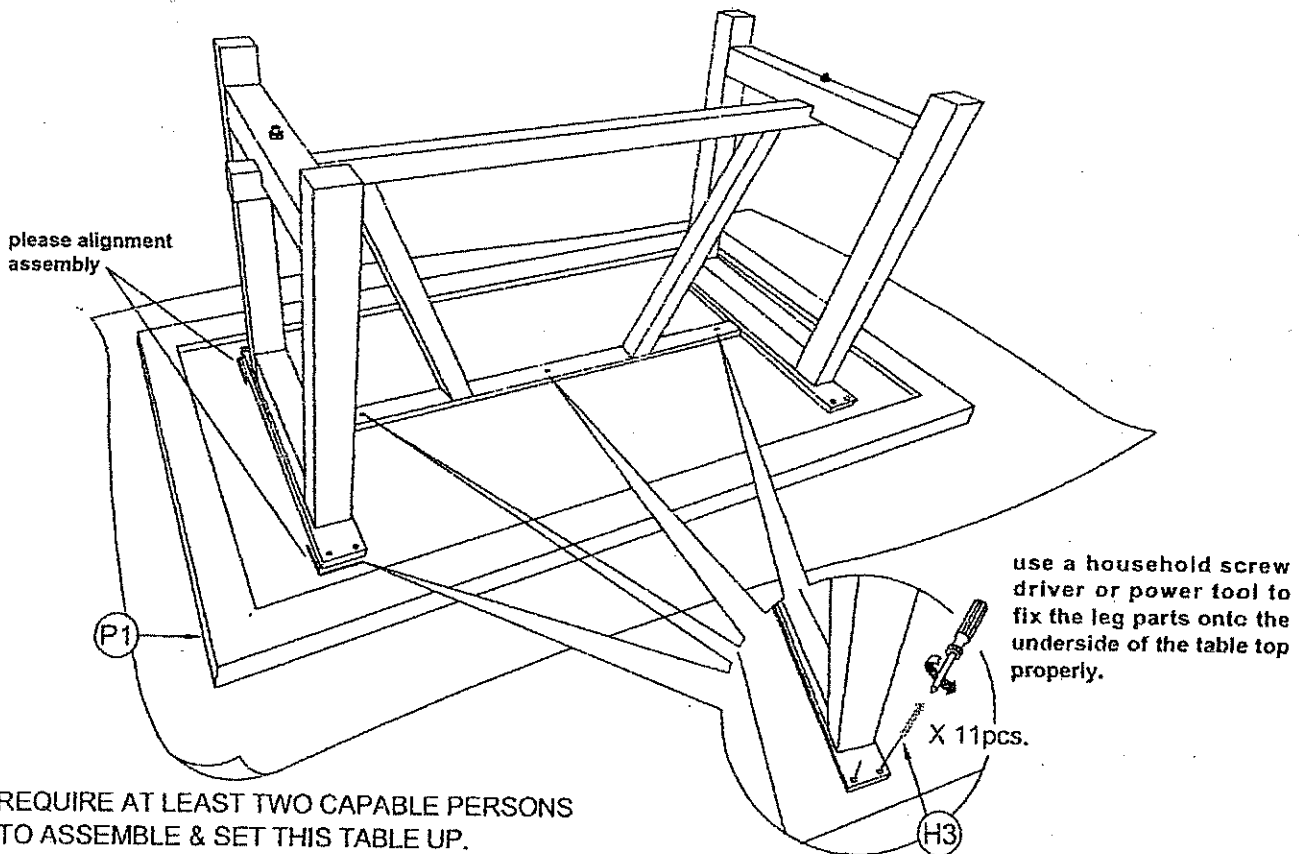

REQUIRE AT LEAST TWO CAPABLE PERSONS TO ASSEMBLE & SET THIS TABLE UP.

CARE AND MAINTENANCE

- SAFETY** - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.
- CLEANING** - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.
- FITTINGS** - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.