




Step 12

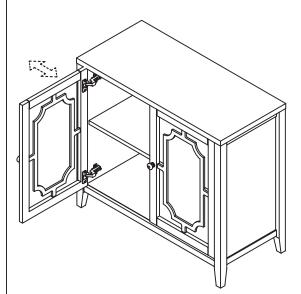


To move doors left or right, loosen screw as shown and move doors to suit. Re-tighten screw.

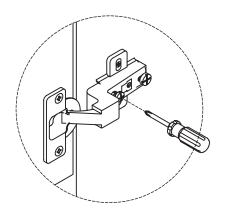

To move doors up or down, loosen screws as shown and move doors to suit. Re-tighten screws.

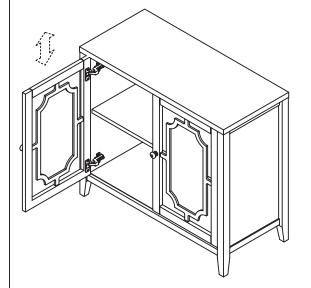

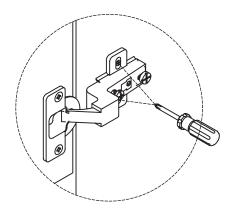

To move doors in or out, loosen screw as shown and move doors to suit. Re-tighten screw.

