






# ASSEMBLY INSTRUCTION ITEM NO: 28045/28055 DRESSER






Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

**IMPORTANT:**

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


HARDWARE LIST				
ITEM	DESCRIPTON	DRAWING	SIZE	QTY
A	WOOD DOWEL		M8 X 30MM	4PCS
B	JCBC SCREW		M6 X 40MM	4PCS
C	SPRING WASHER		M6 X 13MM	4PCS
D	FLAT WASHER		M6 X 19MM	4PCS
E	L - KEY		M4 X 65MM	1PC

PART LIST			
ITEM	DESCRIPTON	DRAWING	QTY
1	DRESSER		1PC
2	LEG (2) (Located in the bottom drawer)		2PCS
3	LEG (3) (Located in the bottom drawer)		2PCS
4	SUPPORT LEG (Located in the bottom drawer)		1PC
5	TIPPING RESTRAINT (Affix to wall behind chest) *Located in the Chest 1st Drawer		1PC

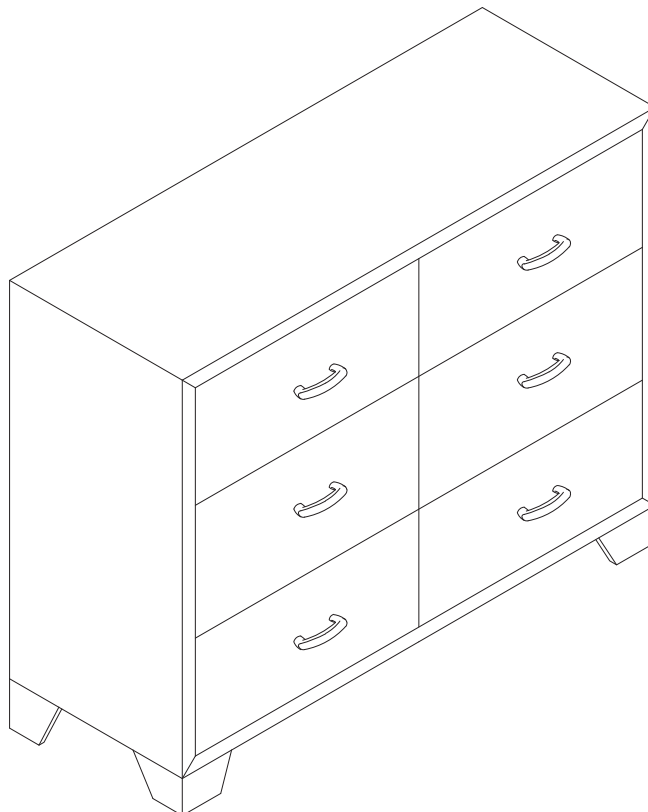

# ASSEMBLY INSTRUCTION

ITEM NO : 28045/28055 DRESSER

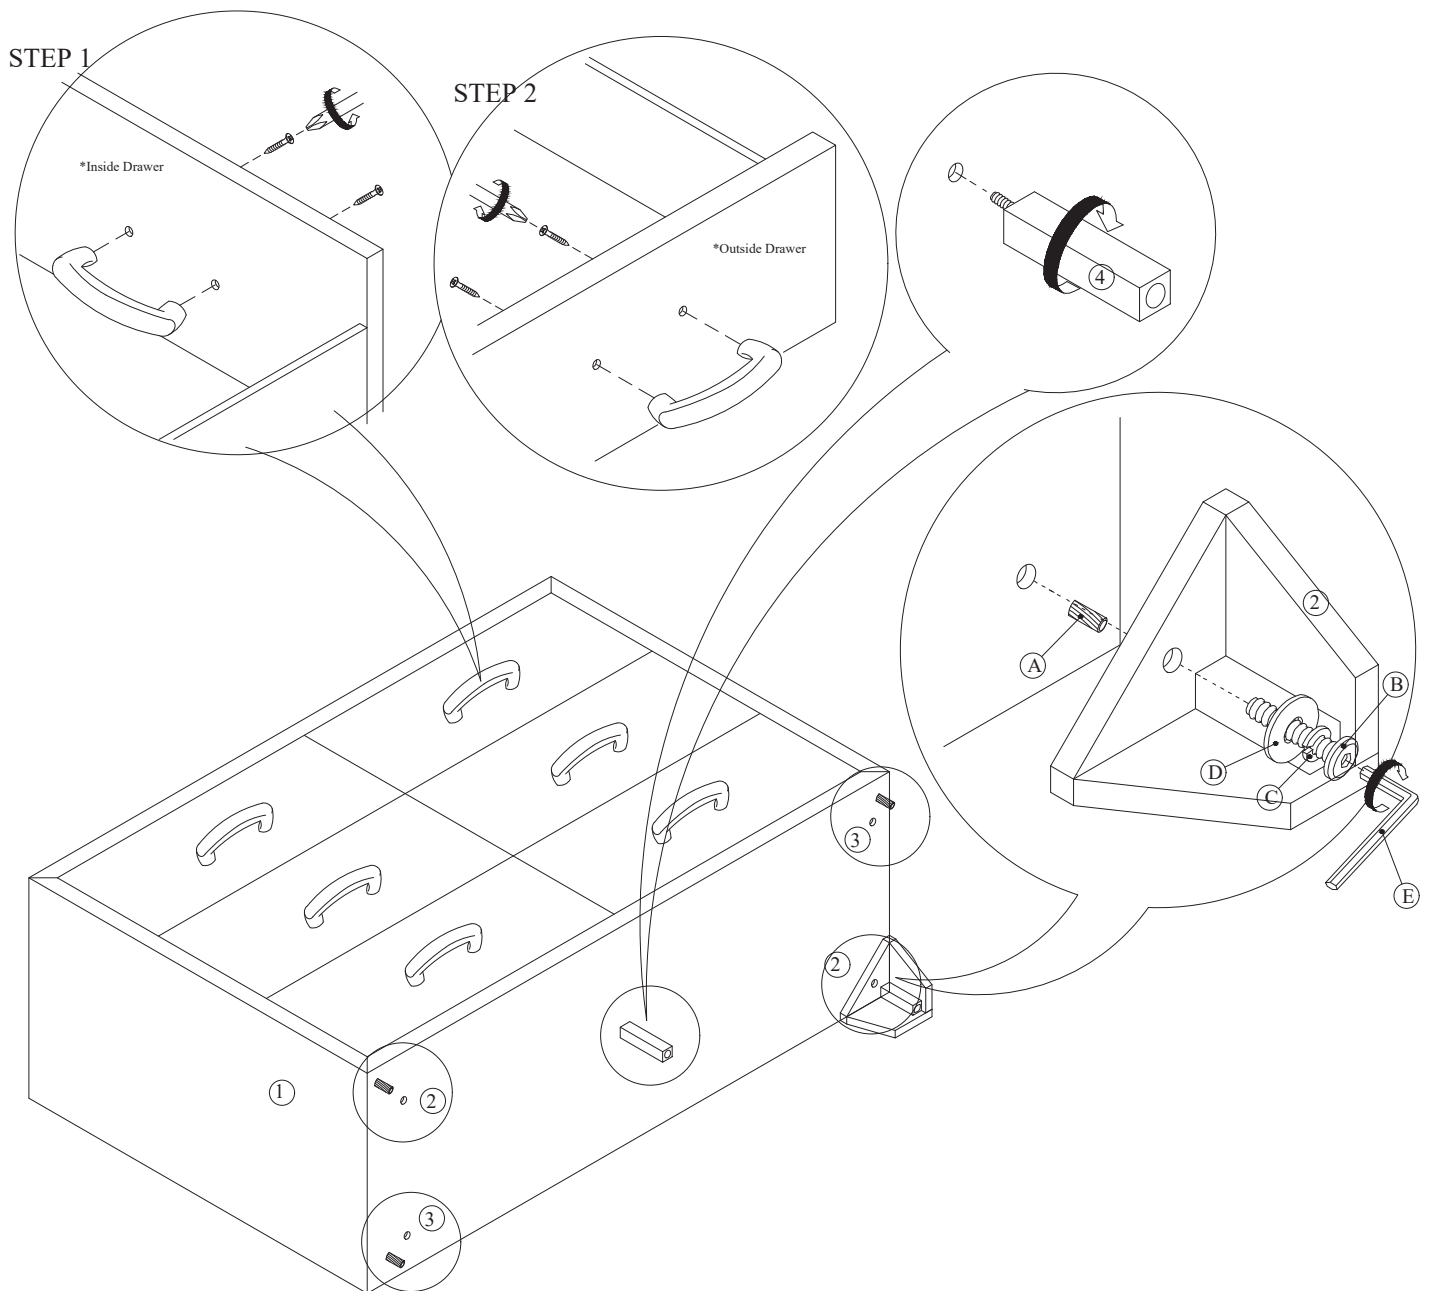

ASSEMBLY  
COMPLETED

# ASSEMBLY INSTRUCTION

ITEM NO : 28045/28055 DRESSER

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

