


## **ASSEMBLY INSTRUCTIONS**

Item No: #37173

\*\*\* Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with parts list below.


\*\*\* Assemble product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.

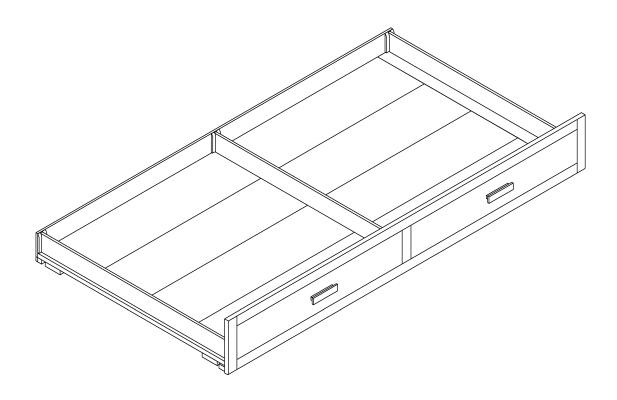


**IMPORTANT**: Do not tighten bolts completely until all bolts are completely lined up and inserted into holes


PARTS LIST				
No	DIAGRAM	PART NAME	Q'Ty	
1		Front trundle bed	1 pc	
2	and the same	Back trundle bed	1 pc	
3		Side trundle bed	2 pcs	
4		Complete bottom panel (4pcs/1set)	1 set	
5		Partition	3 pcs	
6		Slat	3 pcs	

HARDWARE LIST				
No	DIAGRAM	PART NAME	Q'Ty	
A	(I)	Bolt: 6.3 * 35 (mm)	8 pcs	
В	( <del>)</del> )))))))>	Screw: 4 * 30 (mm)	6 pcs	
C	<b>(†)</b>	Screw: 4 * 20 (mm)	8 pcs	
D	<b>(†)111111</b>	Screw: 4 * 15 (mm)	8 pcs	
E		"L" shape connection bracket	2 pcs	
F		Wheel	4 pcs	
G		Handle	2 pcs	
H	Commission	Bolt	4 pcs	
I	0	Flat Washer	4 pcs	
J		Wood Dowel 10 x 40 (mm)	2 pcs	
K		Allen Key (M4)	1 pc	

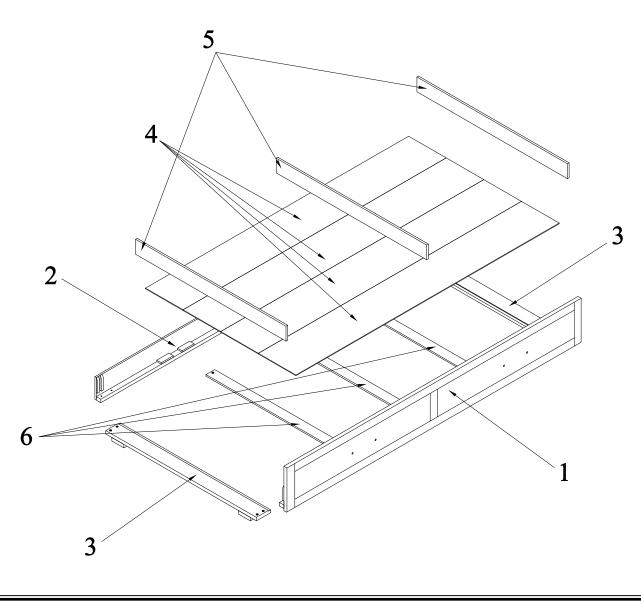

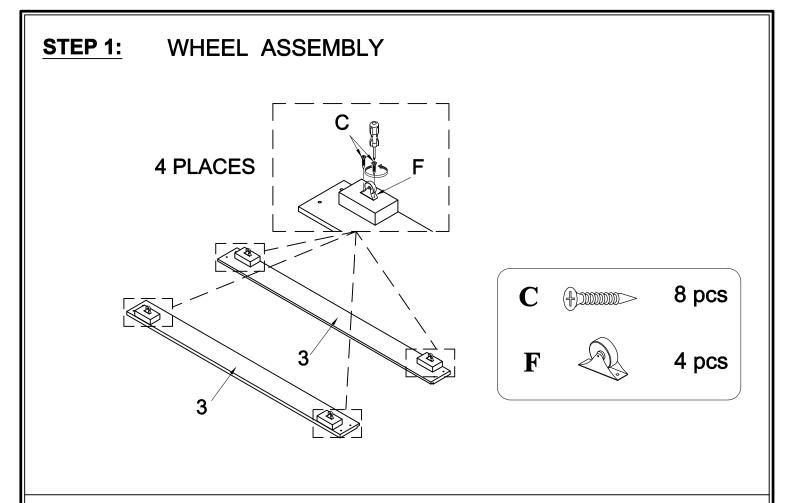

**STEP 2:** FRONT, BACK & SIDE TRUNDLE BED ASSEMBLY

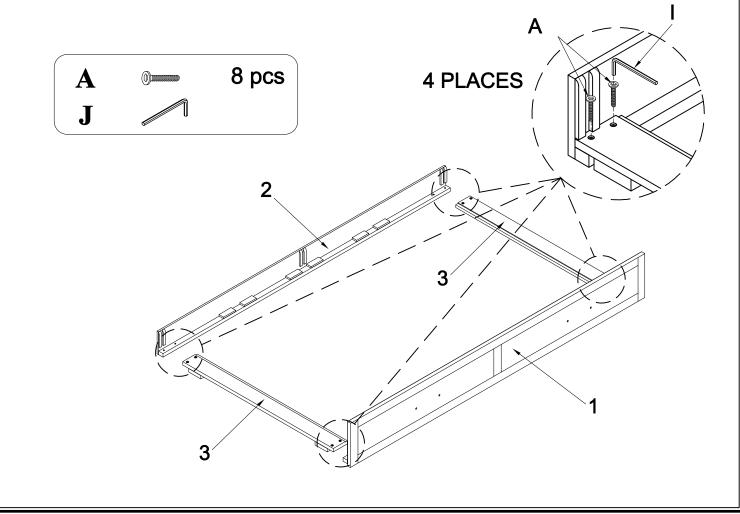


STEP 3: SLAT ASSEMBLY


6 PLACES

B 6 pcs

**STEP 4:** COMPLETE BOTTOM PANEL ASSEMBLY

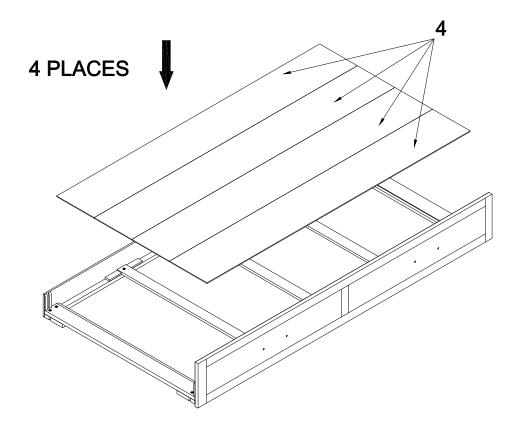



STEP 5: "L" SHAPE CONNECTION BRACKET ASSEMBLY

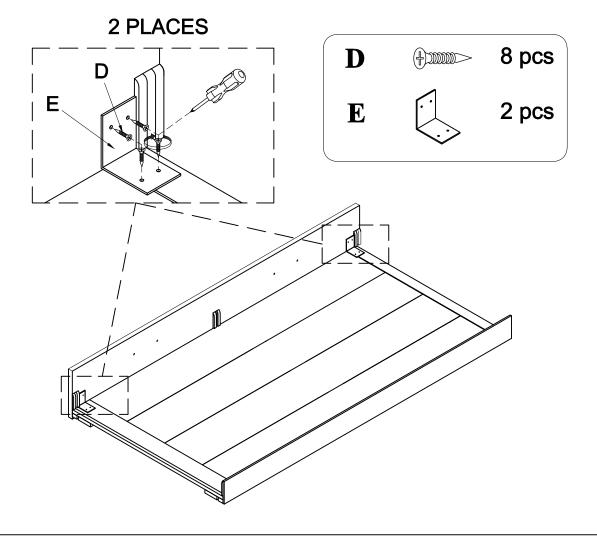


## STEP 6:


IF ADD PARTITION (3PCS), AND THEN CAN BE USING 2 DRAWERS

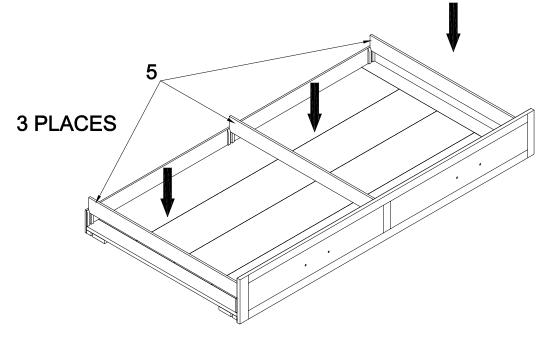

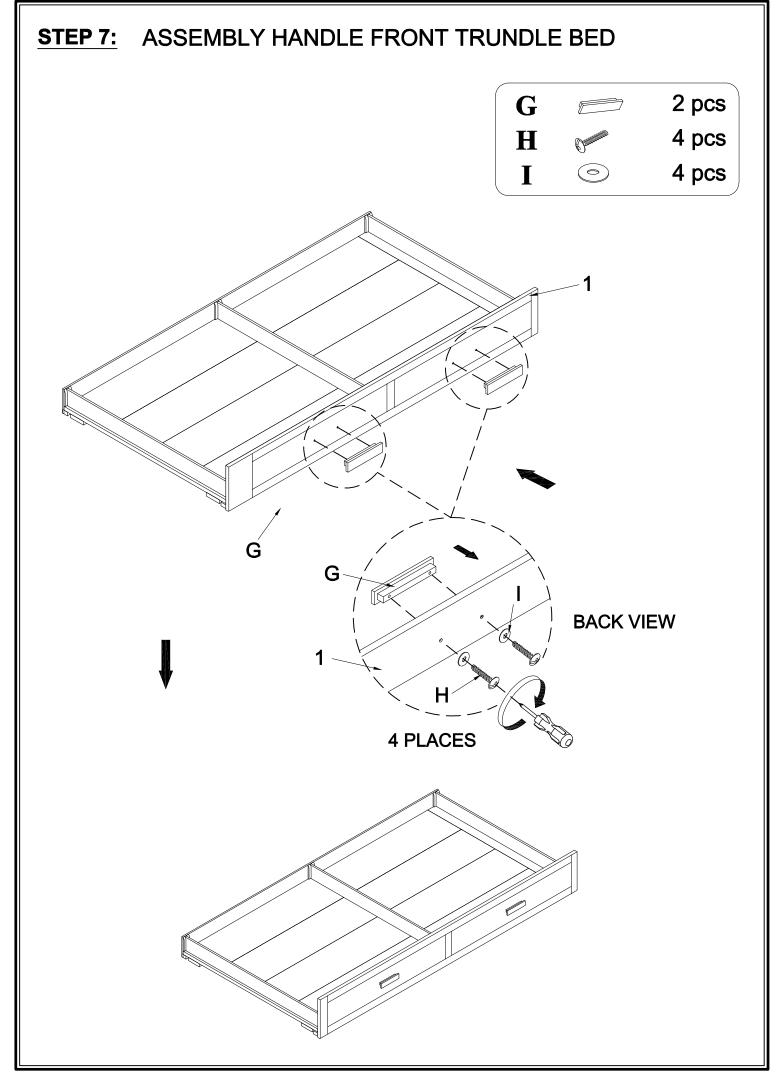

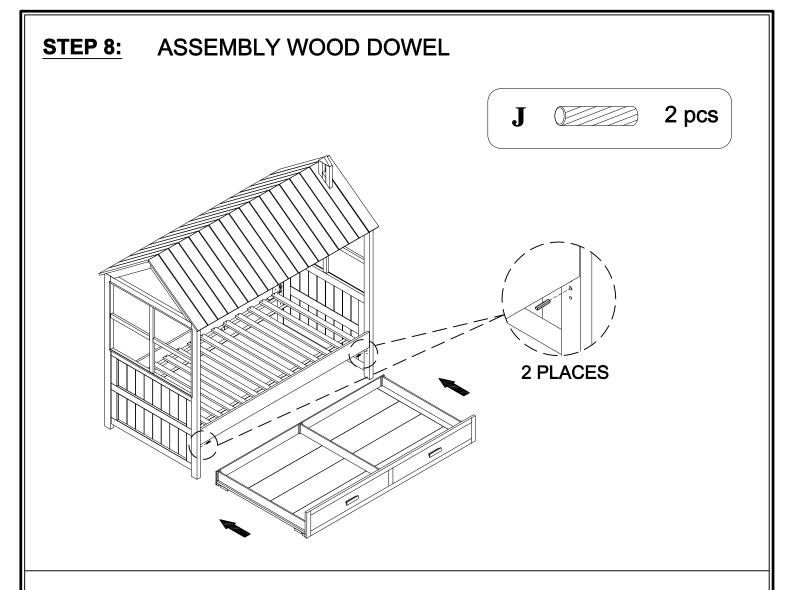

## **STEP 9:**

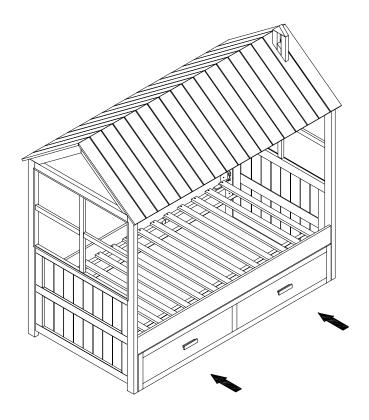

**ASSEMBLY IS COMPLETED**