





# ASSEMBLY INSTRUCTION FOR ACME FURNITURE


## 51042 CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may come loose inside the carton during shipment. Identify and count all parts and metal hardware. Compare with the part list to be sure all parts are present, If any part(s) are missing or damage, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


**\*\*Assemble the product on a flat, soft surface such a carpet or cloth to prevent scratching the product finish. Read all instruction and study the drawing carefully before starting the assembly process.**

PART LIST			
NO	PART	DECS	QTY
A		BACKREST	1PC
B		SEAT	1PC


HARDWARE LIST			
NO	HARDWARE	DECS	QTY
1		BOLT	1PC
2		LOCK WASHER	1PC

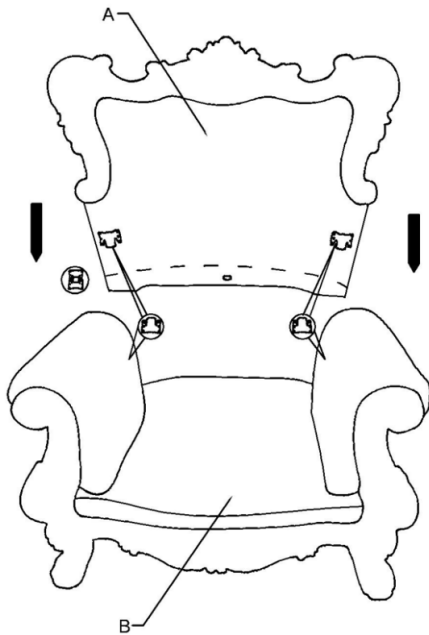


**STEP 1**  
Please hang up the bracket on the backrest into the bracket on the arm.

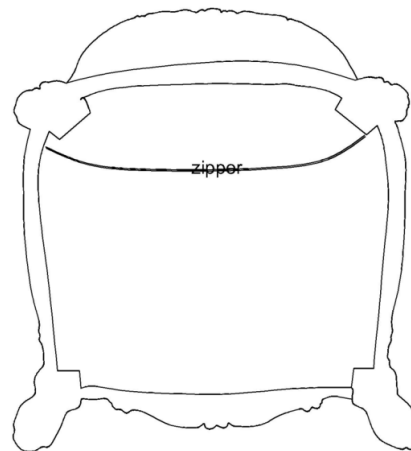


**STEP 2**  
Turn the chair face down on a smooth, soft surface and unzip the black bottom fabric.

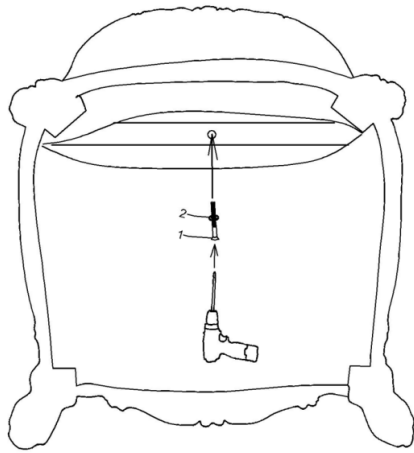

**STEP 3**  
Screw up the bolt into the wood frame underneath the chair with electric drill.

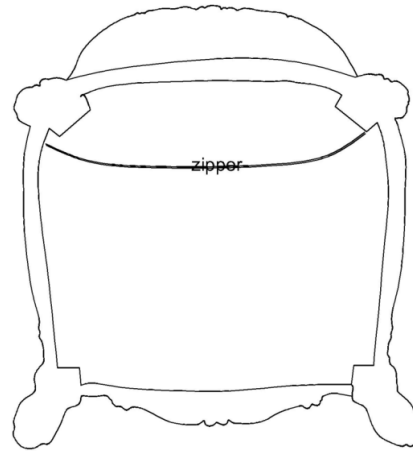

**STEP 4**  
Zipped up the black bottom fabric.

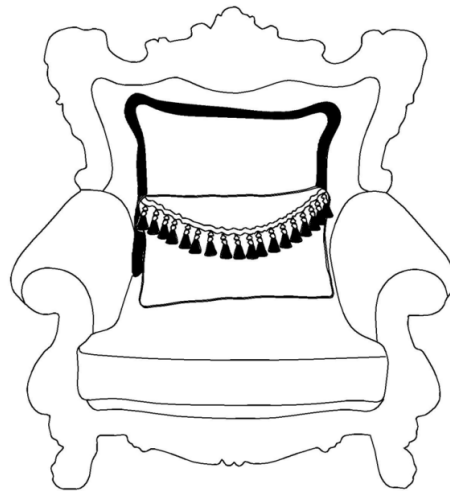

**STEP 5**  
Turn the chair over and set up the cushion and pillows.

Caution: Over tightening screw or bolts may cause damage.  
It is suggested that two people work together for this assembly process.