


ASSEMBLY INSTRUCTION FOR ACME FURNITURE


MODEL# 52375LOV,52376WED SECTIONAL SOFA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


***** Do not fully tighten screws until fully assembled *****

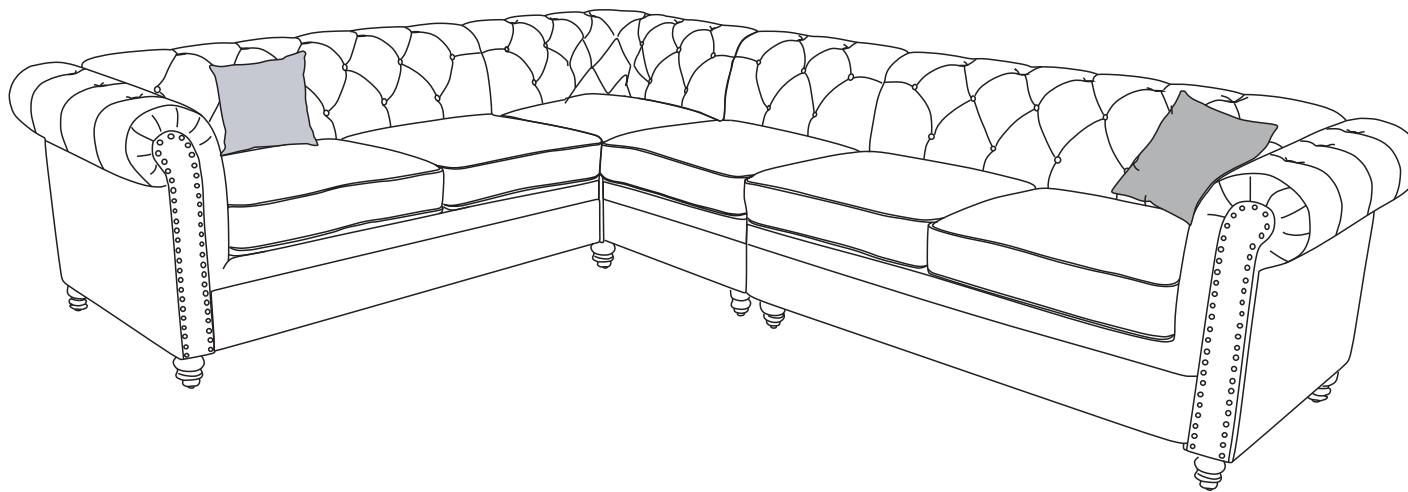


Parts List

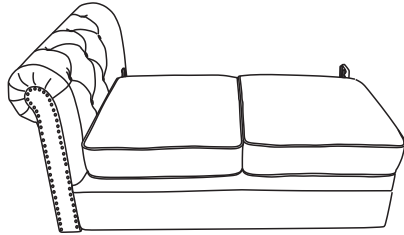


A SoFa Body x1

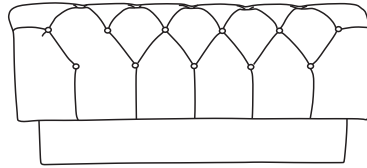


B Backrest Body x1

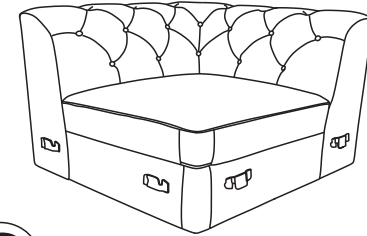

C Cornerx1

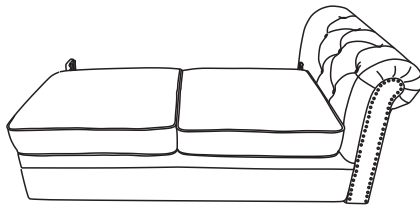


D SoFa Body x1

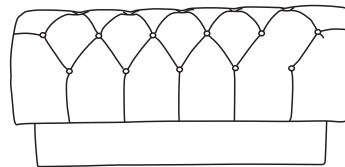


E Backrest Body x1



F Arm chair x1

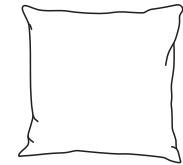

G Pillow x2



J Wood Leg X20



K Plastic Washer X20

Figure1

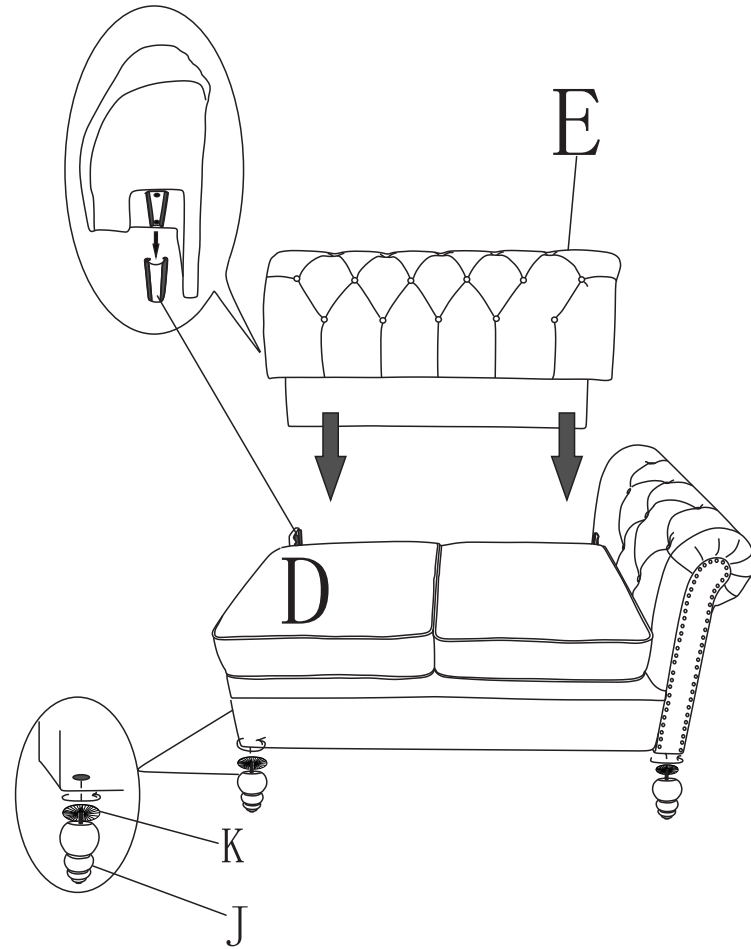
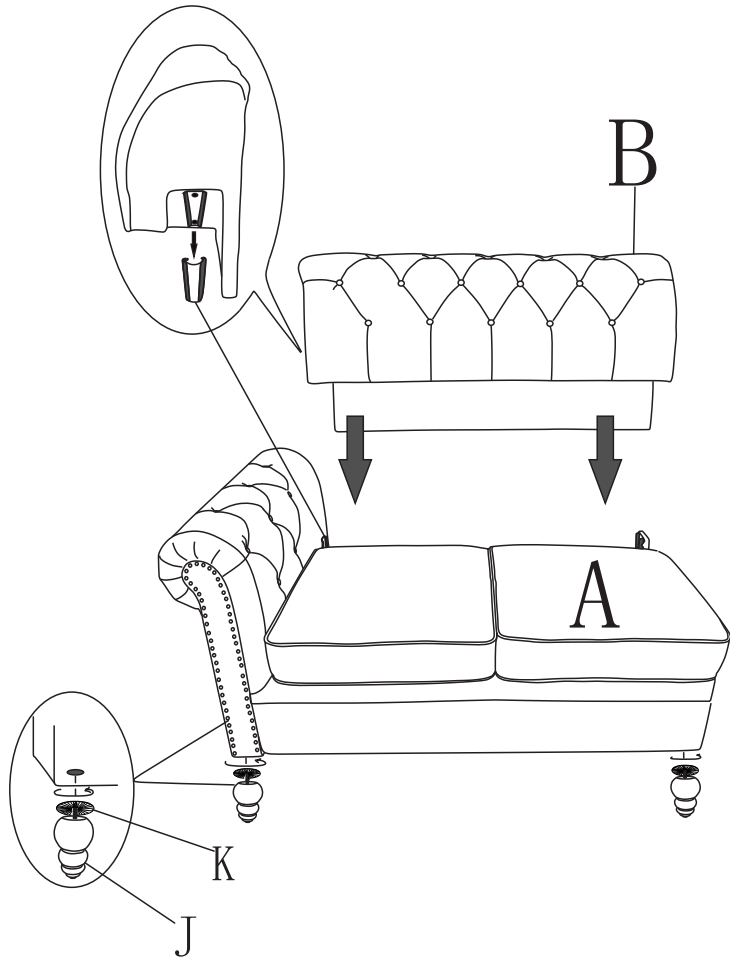


Figure2

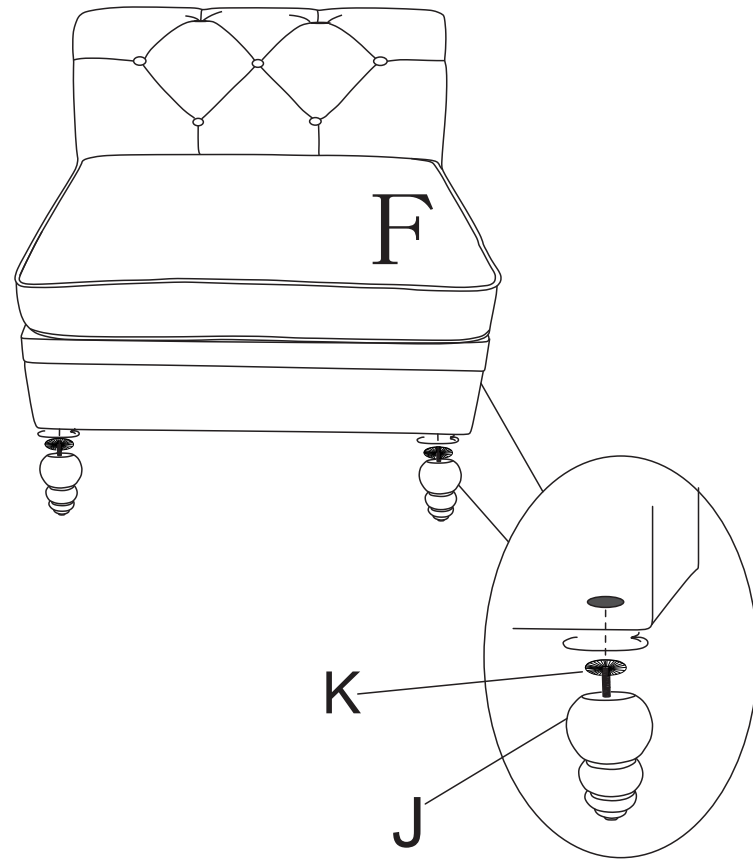
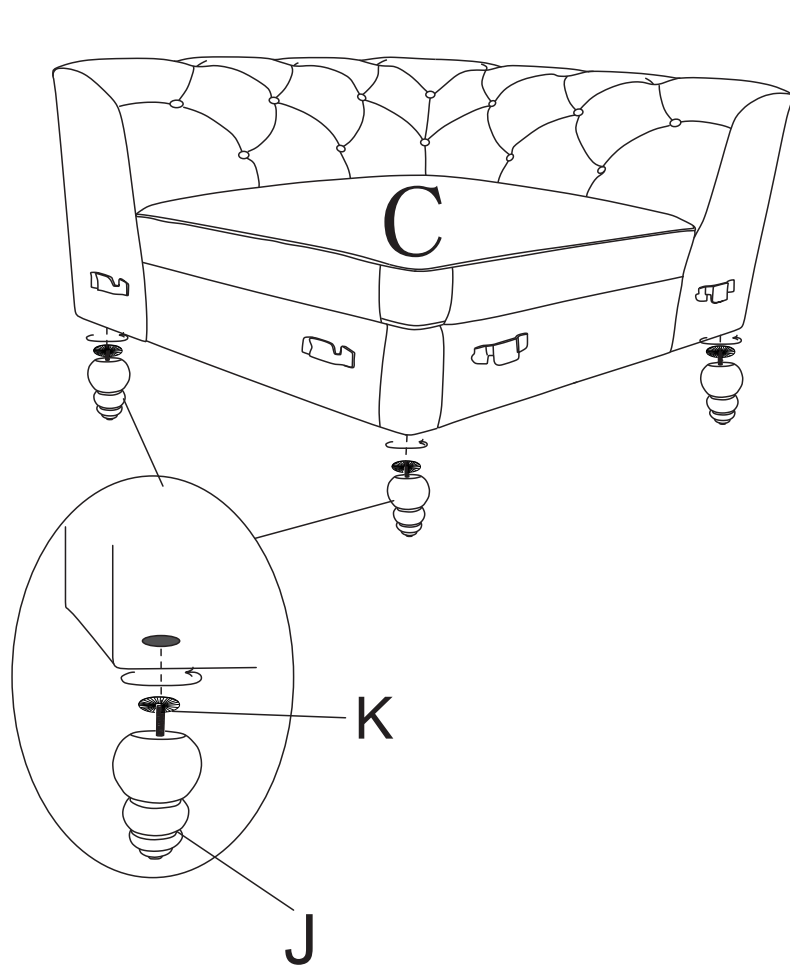


Figure 3

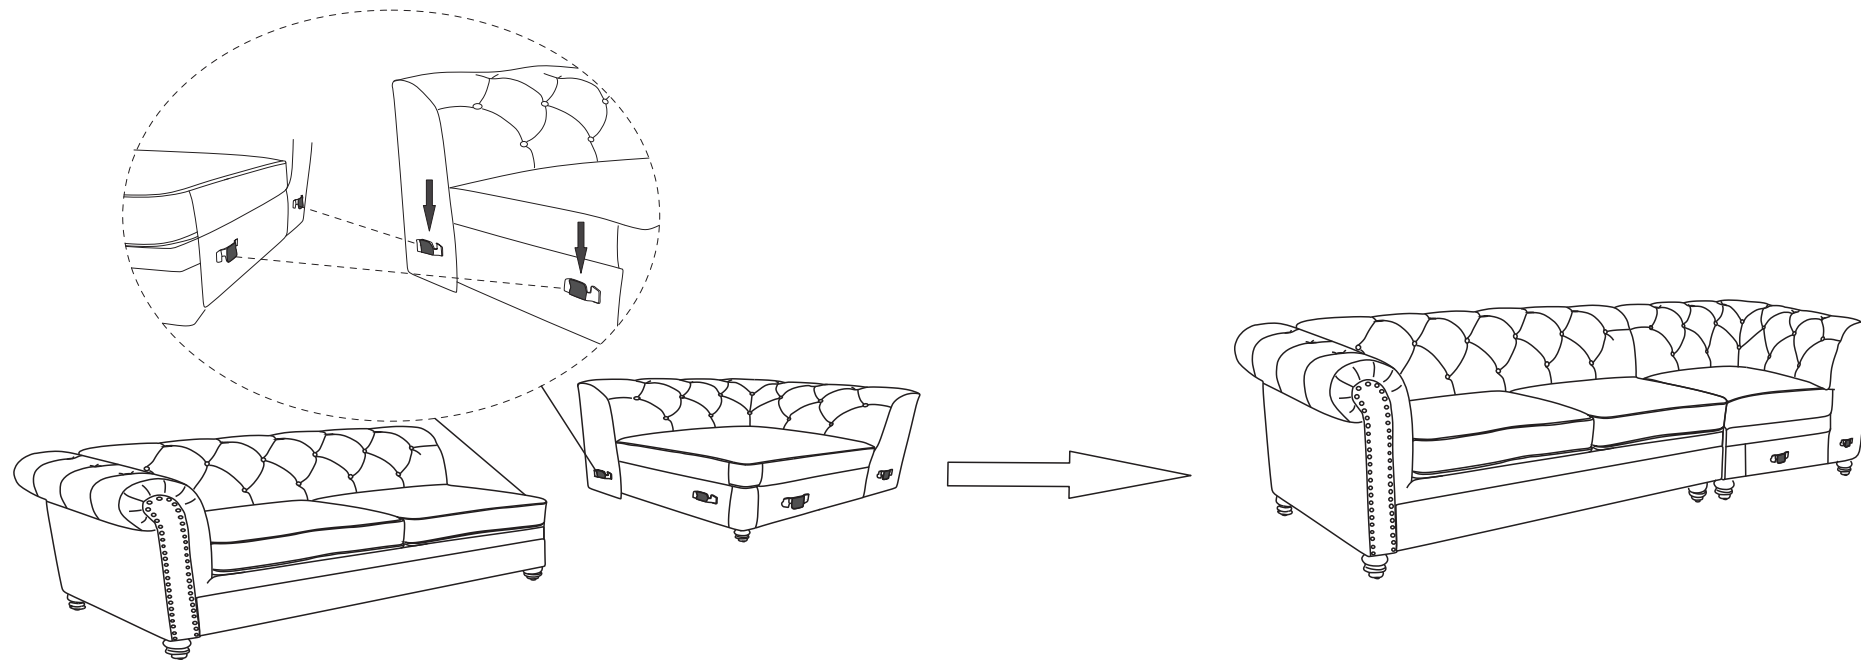


Figure 4

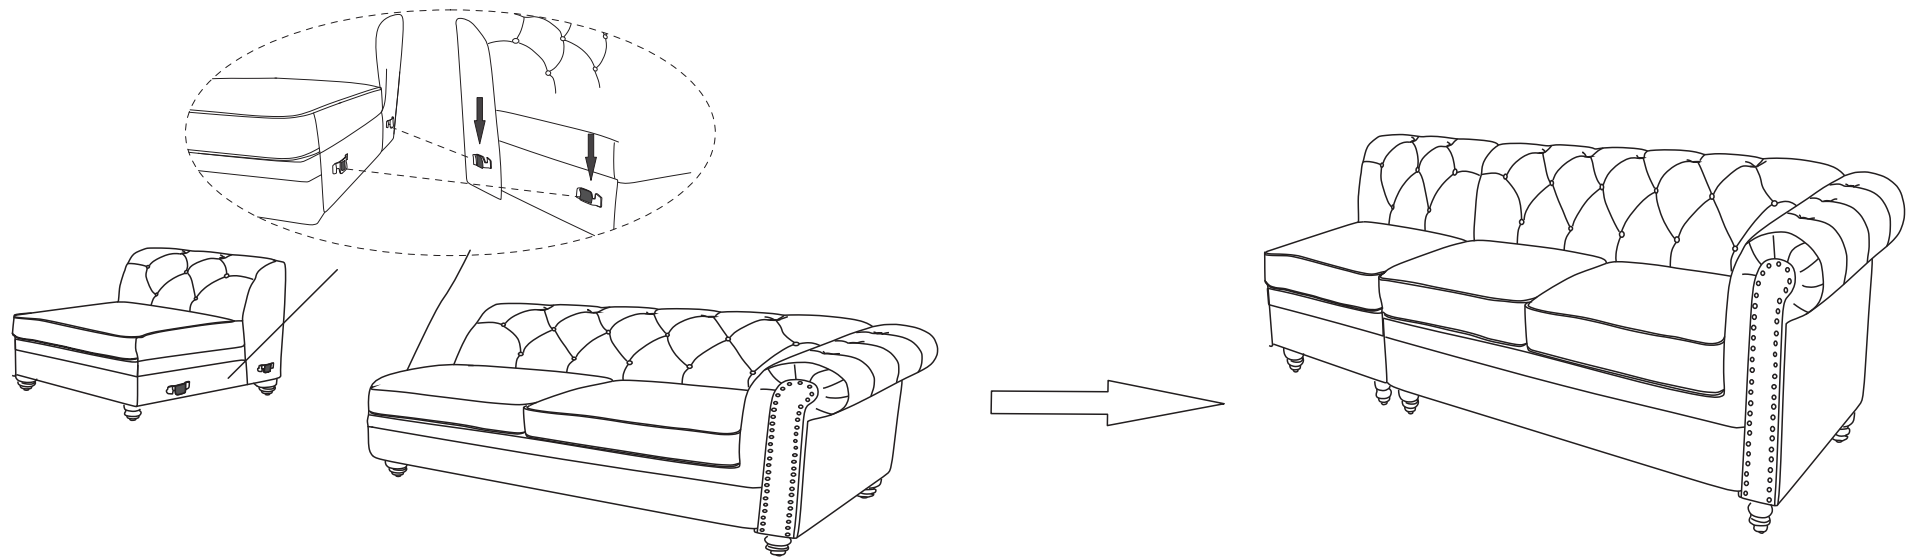


Figure 5

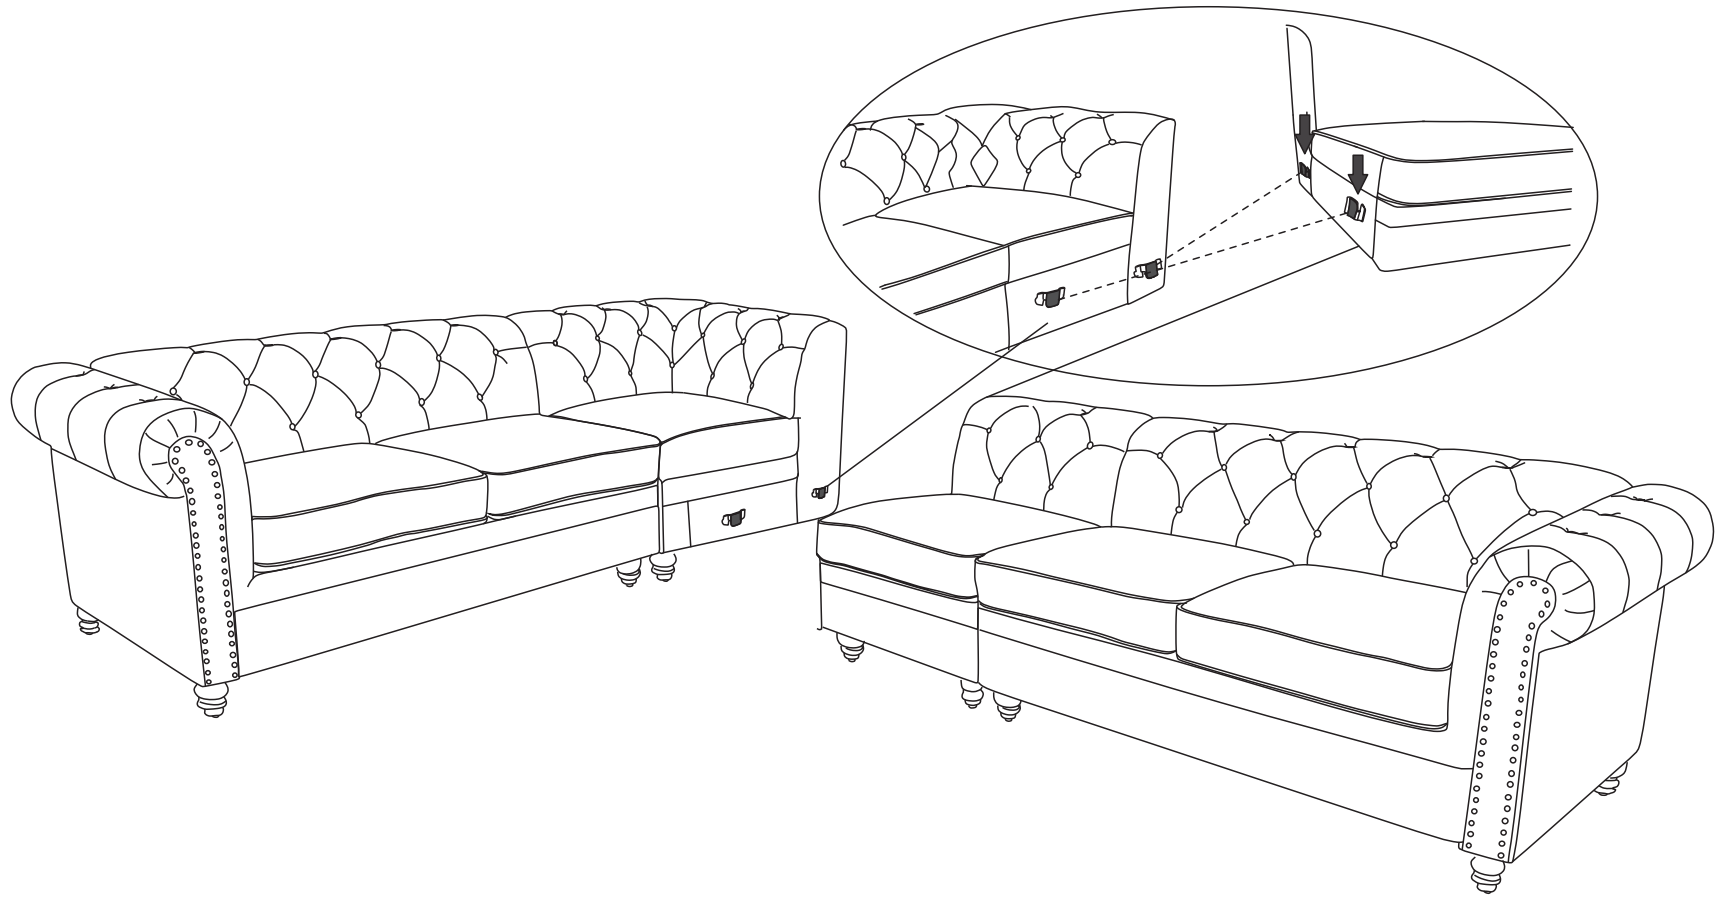


Figure 6

