

ASSEMBLY INSTRUCTION # 63154


Step 1:

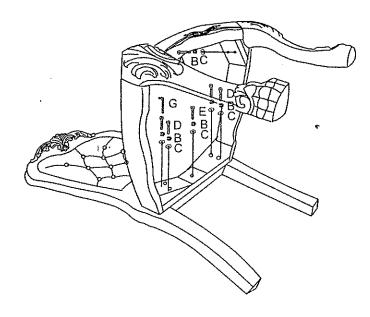

Step 2:

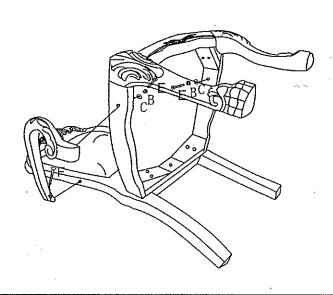

Finish:

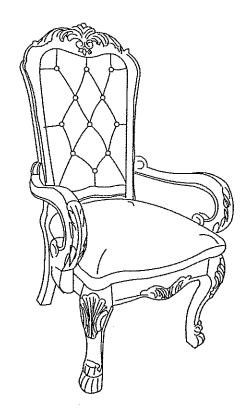

Hardware List:

No.:	Description	Drawing	Size
Α	Middle Bolt	(finninin)	Ø5/16" X2-1/4 "
В	Lock 'Washer	O ·	Ø5/16" X12mm
С	Flat Washer	0	Ø5/16" X22mm
D	Long Bolt	(finning mann)	Ø5/16" X3-1/2 "
Е	Short Bolt	(Cilillian)	Ø5/16" X1-3/4 "
F	Wood Screw	Описи	Ø8 X 1-1/2"
G	Allen Wrench		5mm