



**** Do not tighten any bolts until all of them have been started !**

ITEM #81000


Step 1.

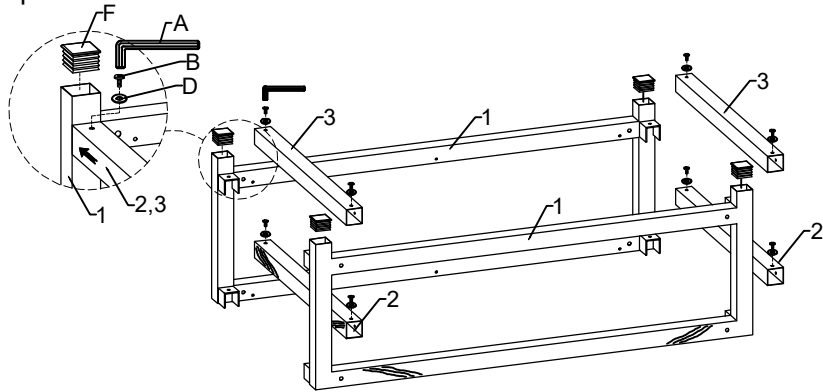


Step 2.

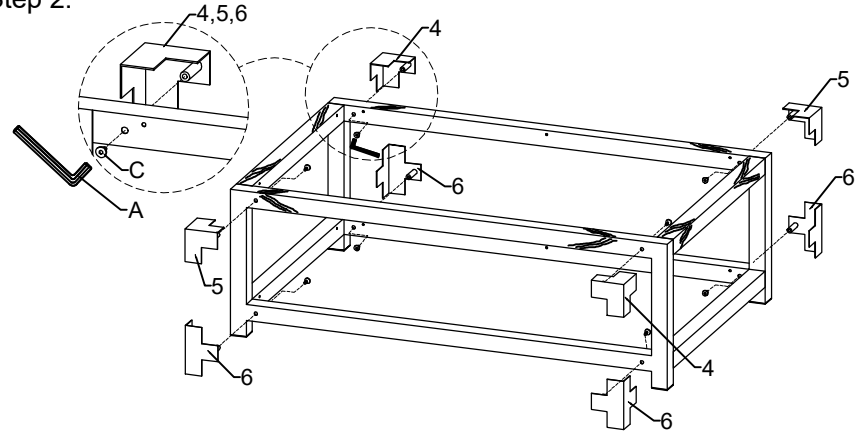




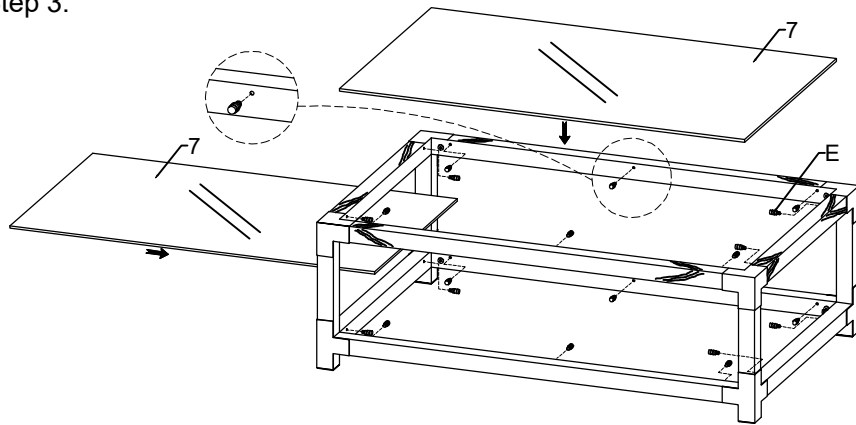


Step 3.

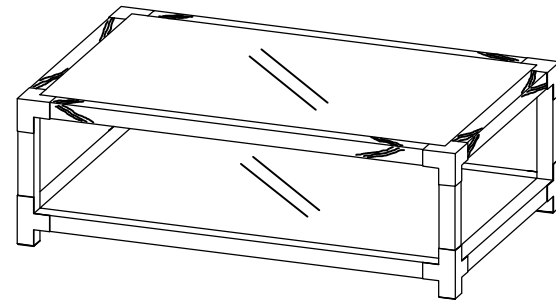








Step 4.



ACCESSORY PACK

<p>A</p>  <p>1PC</p>	<p>B</p>  <p>8PCS</p>	<p>C</p>  <p>8PCS</p>	<p>D</p>  <p>8PCS</p>	<p>E</p>  <p>20PCS</p>	<p>F</p>  <p>4PCS</p>
---	--	--	--	---	--

COMPLETE HARDWARE

<p>1</p>  <p>2PCS</p>	<p>2</p>  <p>2PCS</p>	<p>3</p>  <p>2PCS</p>	<p>4</p>  <p>2PCS</p>	<p>5</p>  <p>2PCS</p>	<p>6</p>  <p>4PCS</p>	<p>7</p>  <p>2PCS</p>
--	--	--	---	--	--	--