



**** Do not tighten any bolts until all of them have been started !**


Step 1.

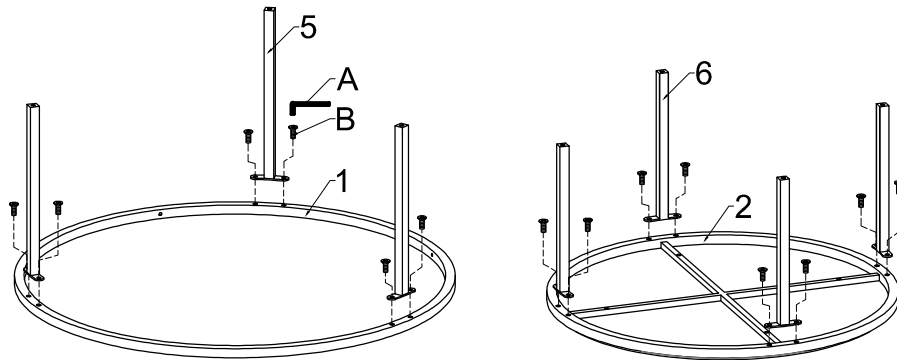


Step 2.

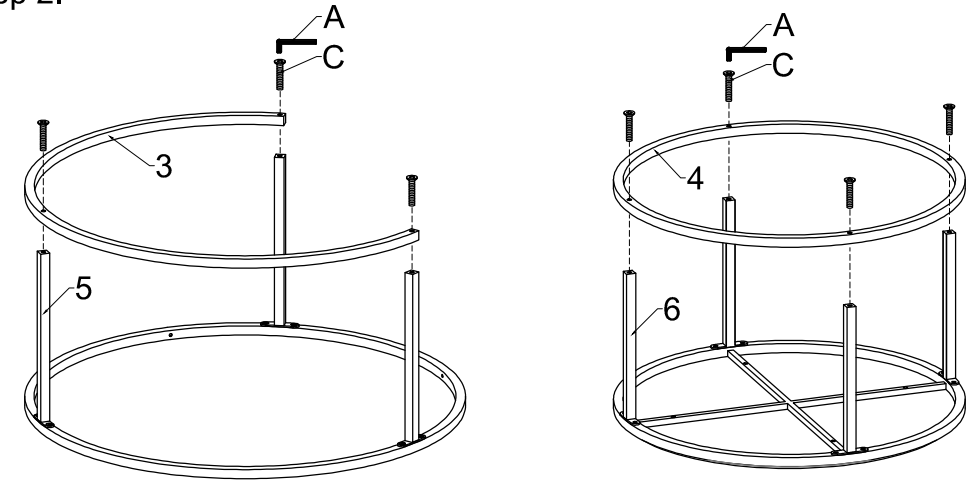

Step 3.

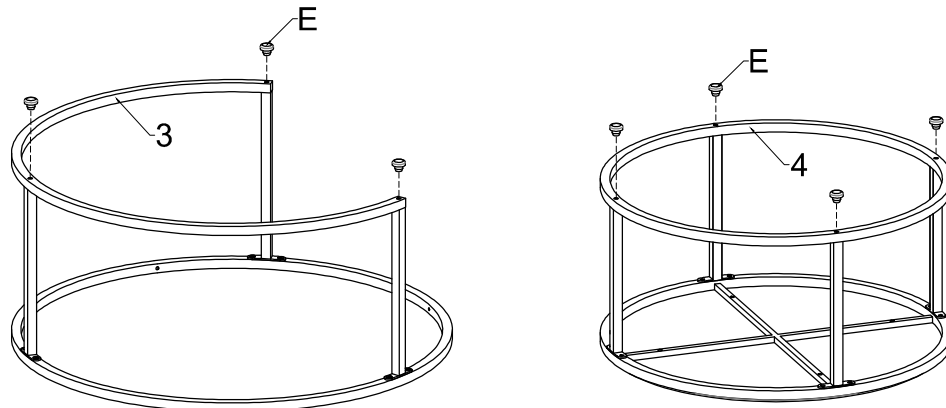

Step 4.

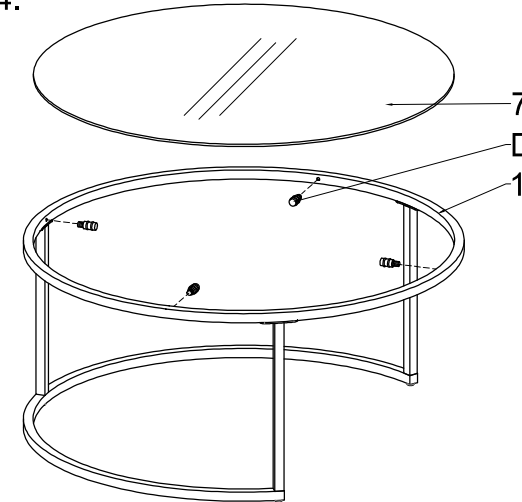

ACCESSORY PACK

<p>A</p> <p>1/4"</p> <p>1PC</p>	<p>B</p> <p>14PCS</p>	<p>C</p> <p>7PCS</p>	<p>D</p> <p>4PCS</p>	<p>E</p> <p>9PCS</p>
---------------------------------	-----------------------	----------------------	----------------------	----------------------

COMPLETE HARDWARE

<p>1</p> <p>1PC</p>	<p>2</p> <p>1PC</p>	<p>3</p> <p>1PC</p>	<p>4</p> <p>1PC</p>	<p>5</p> <p>360mm</p> <p>3PCS</p>	<p>6</p> <p>300mm</p> <p>4PCS</p>	<p>7</p> <p>1PC</p>
---------------------	---------------------	---------------------	---------------------	-----------------------------------	-----------------------------------	---------------------