



**** Do not tighten any bolts until all of them have been started !**

MODEL ITEM #92670


Step 1.

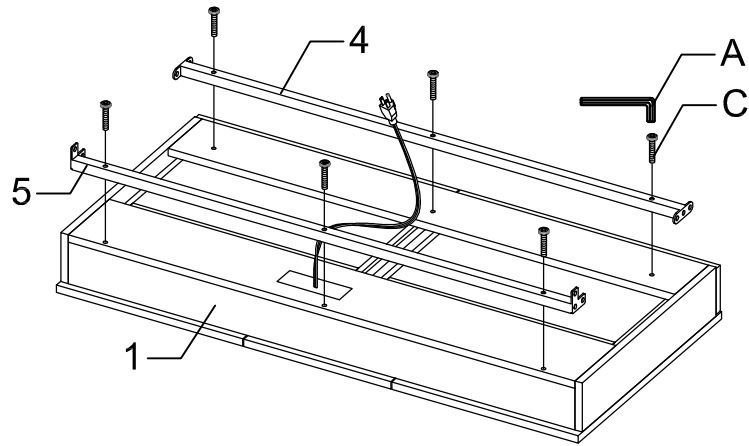


Step 3.

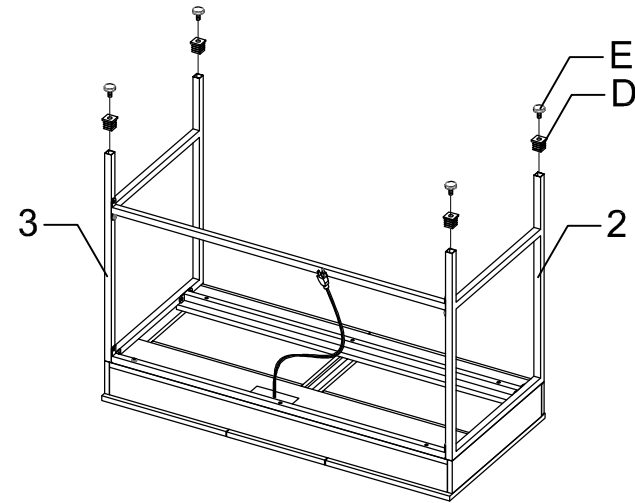



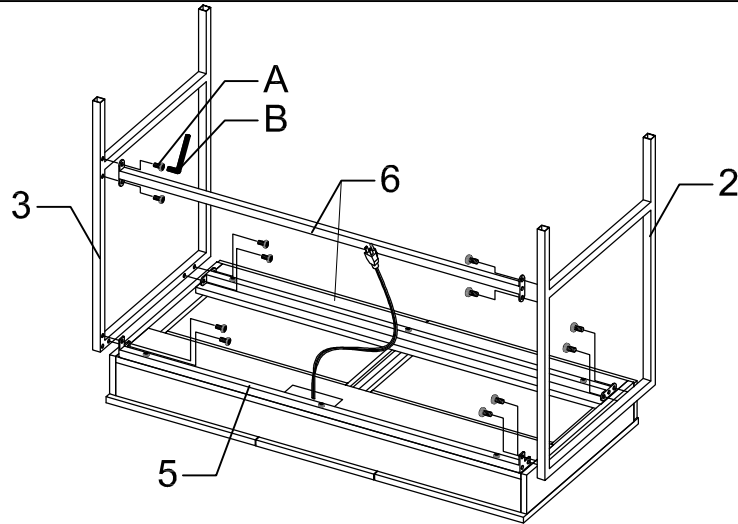


Step 2.

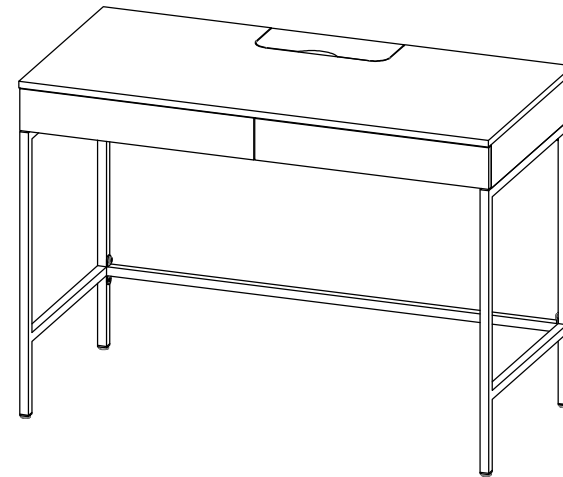







Step 4.



ACCESSORY PACK

A  1PC	B  12PCS	C  6PCS	D  4PCS	E  1PC
---	---	--	--	---

COMPLETE HARDWARE

1  1PC	2  1PC	3  1PC	4  1PC	5  1PC	6  1PC
--	---	--	---	---	---