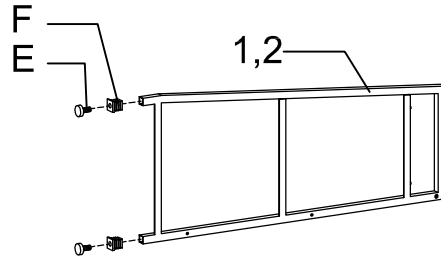


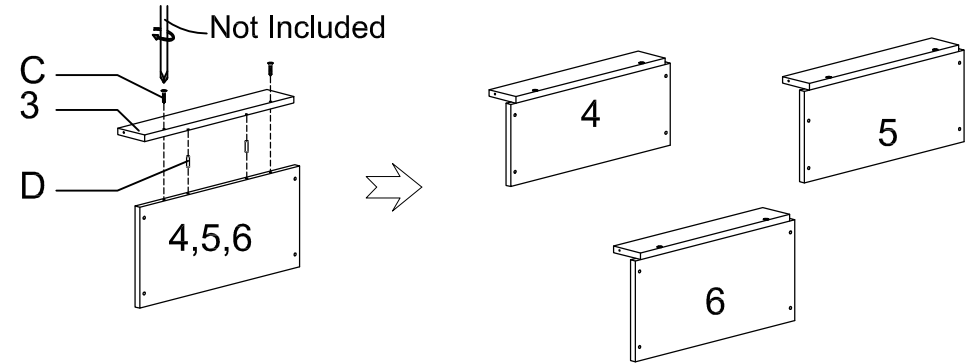
**** Do not tighten any bolts until all of them have been started !**

MODEL ITEM #92672

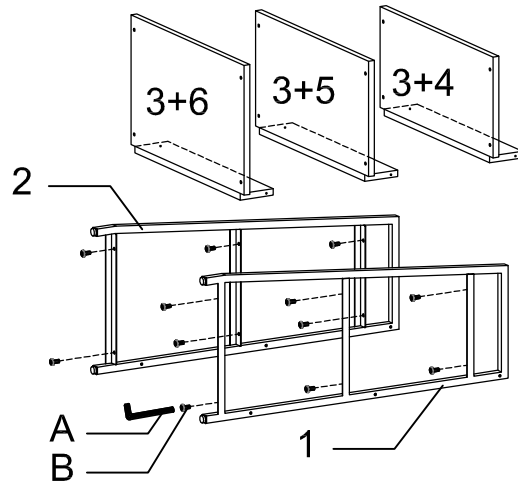
Step 1.



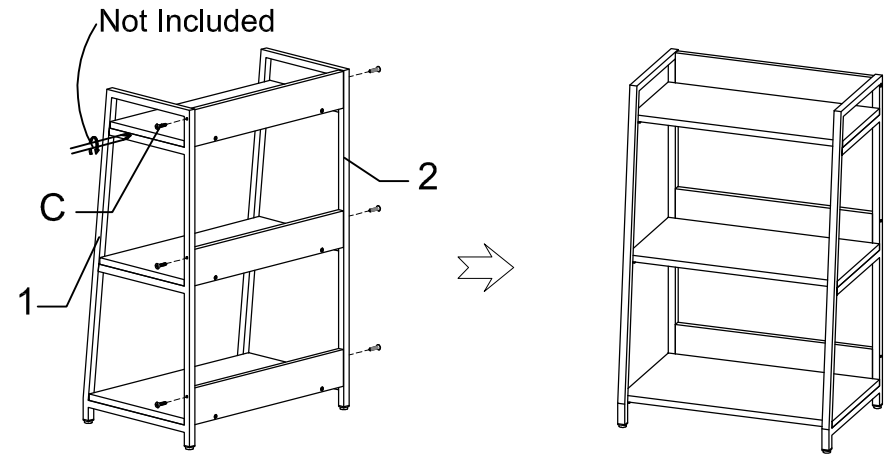
Step 2.









Step 3.



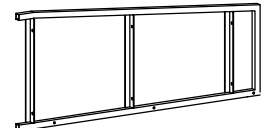
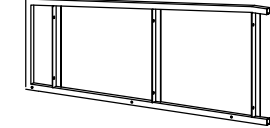




Step 4.



ACCESSORY PACK

| | | | | | |
|--|--|--|---|---|---|
| A  1PC | B  12PCS | C  12PCS | D  6PCS | E  4PCS | F  4PCS |
|--|--|--|---|---|---|

COMPLETE HARDWARE

| | | | | | |
|--|--|--|--|--|--|
| 1  1PC | 2  1PC | 3  3PCS | 4  1PC | 5  1PC | 6  1PC |
|--|--|--|--|--|--|