






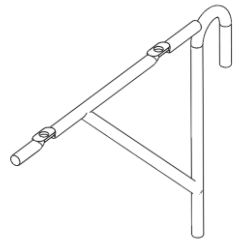

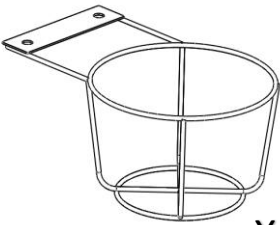
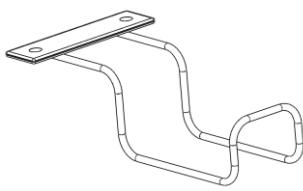

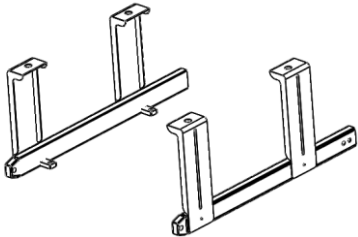
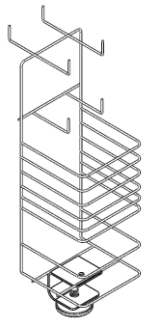


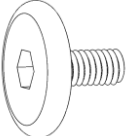
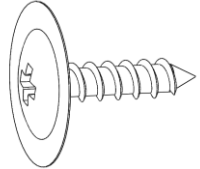
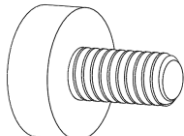



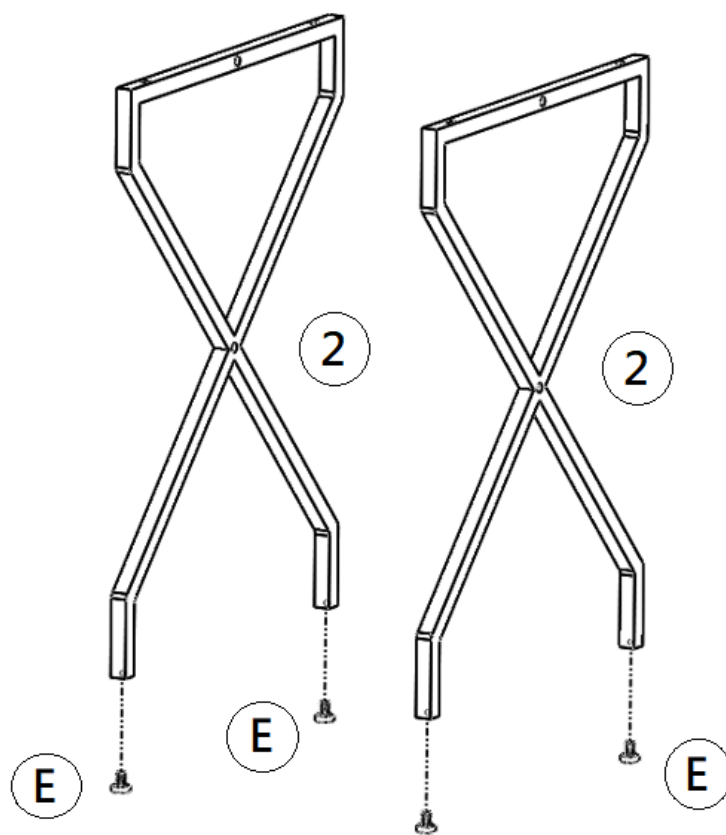
ASSEMBLY INSTRUCTIONS ACME FURNITURE  
MODEL #92870

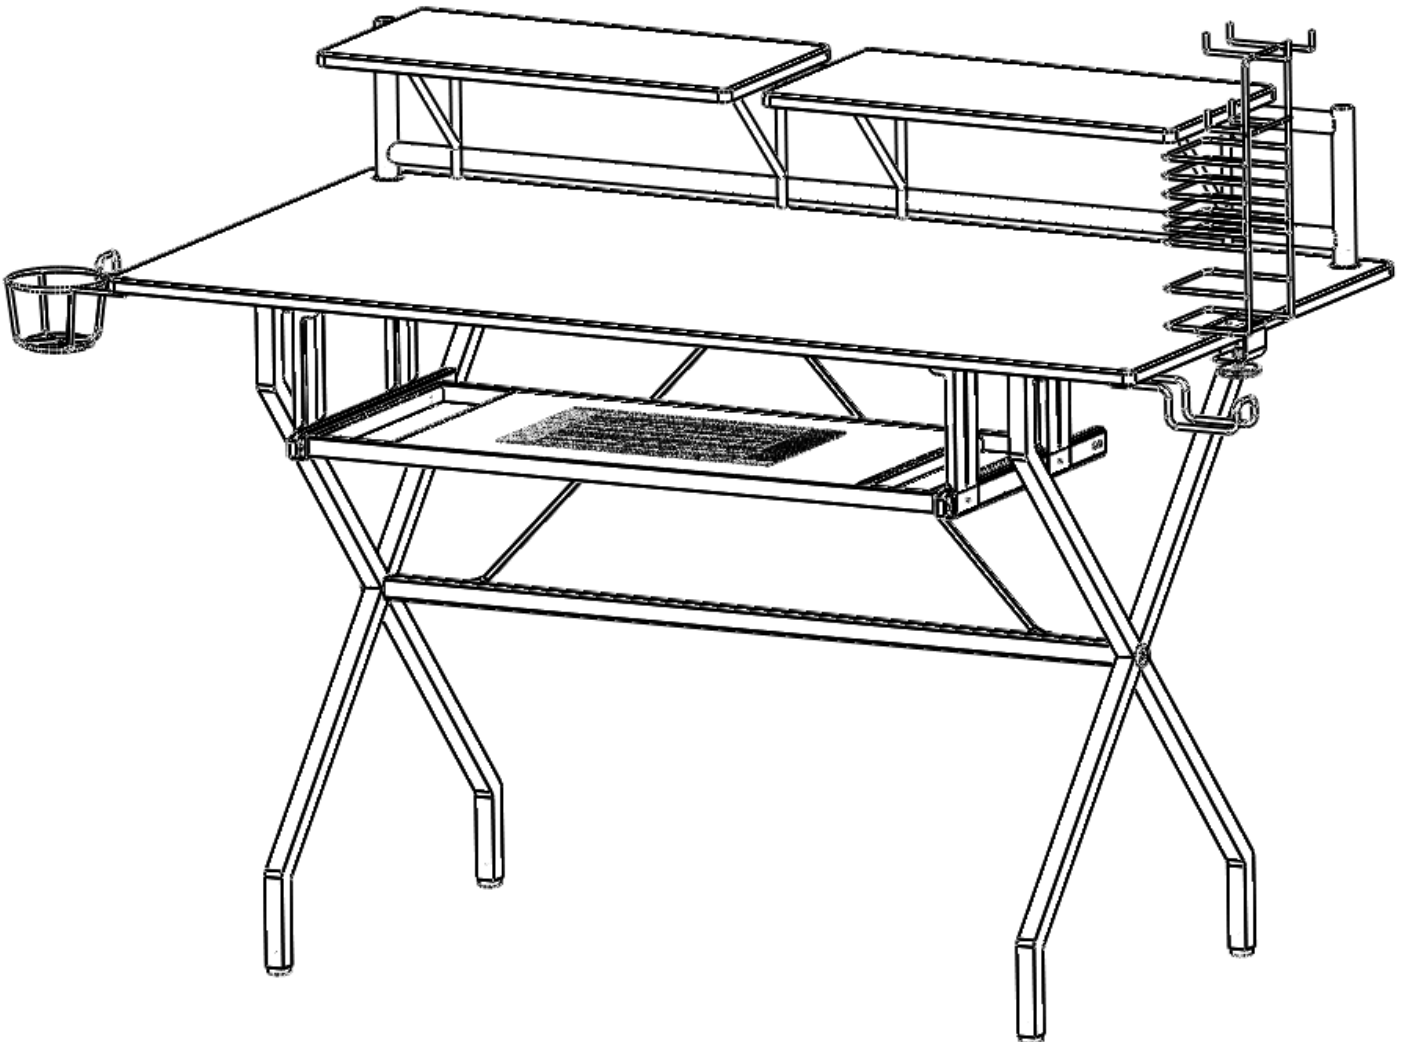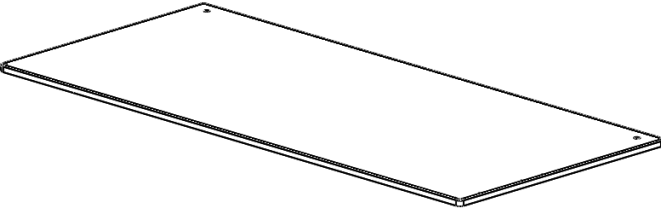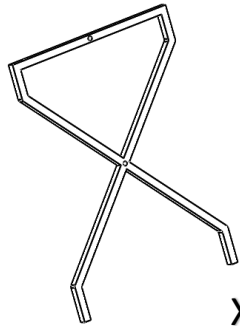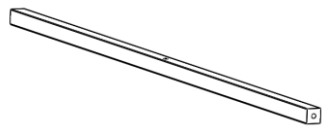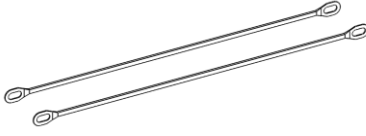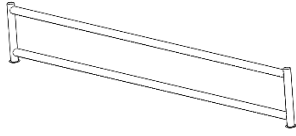


# PARTS

<p>1.</p>  <p>X1</p>	<p>2.</p>  <p>X2</p>	<p>3.</p>  <p>X1</p>	
<p>4.</p>  <p>X2</p>	<p>5.</p>  <p>X1</p>	<p>6.</p>  <p>X2</p>	<p>7.</p>  <p>X4</p>
<p>8.</p>  <p>X1</p>	<p>9.</p>  <p>X1</p>	<p>10.</p>  <p>X2</p>	<p>11.</p>  <p>X1</p>
<p>12.</p>  <p>X2</p>	<p>13.</p>  <p>X1</p>	<p>A.M6x45</p>  <p>X4</p>	<p>B.M6x32</p>  <p>X6</p>
<p>C. M6x12</p>  <p>X7</p>	<p>D.M4x12</p>  <p>X18</p>	<p>E.</p>  <p>X4</p>	<p>F.</p>  <p>X1</p>


# STEP.1




# STEP.2

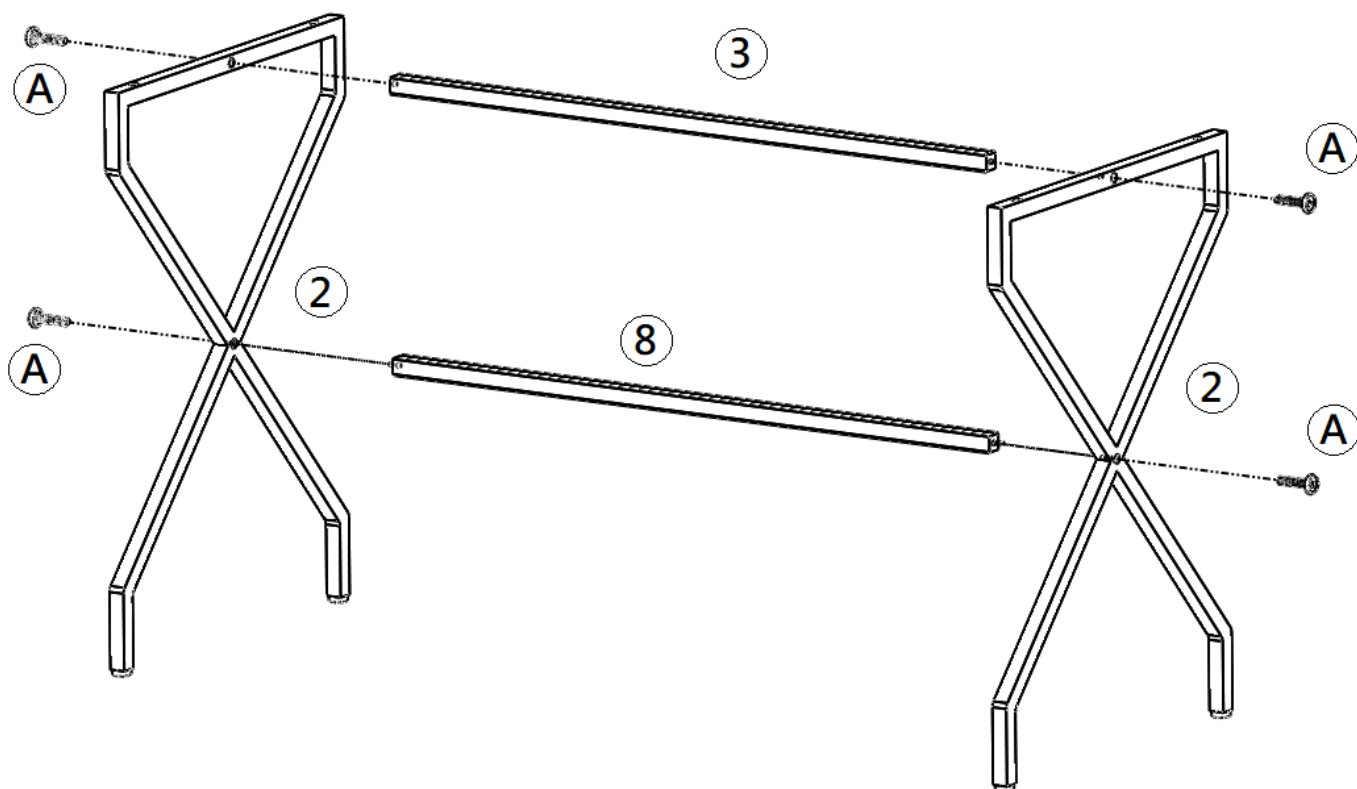


## STEP.3

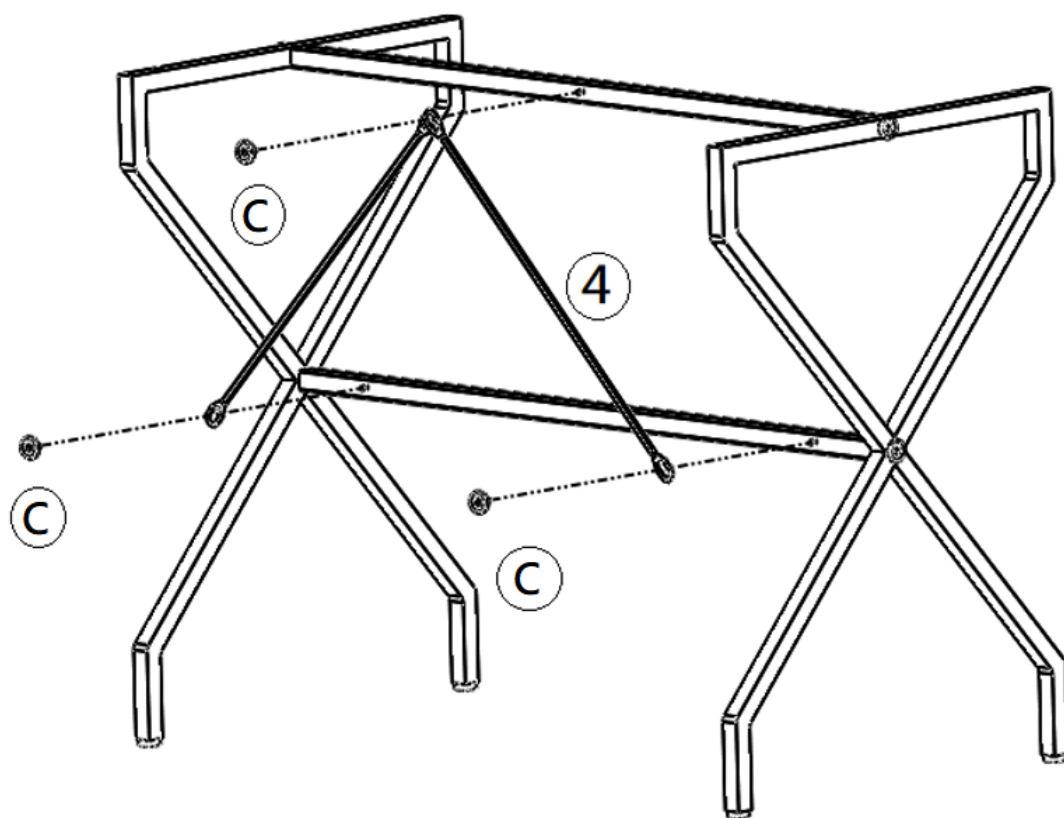


## STEP.4

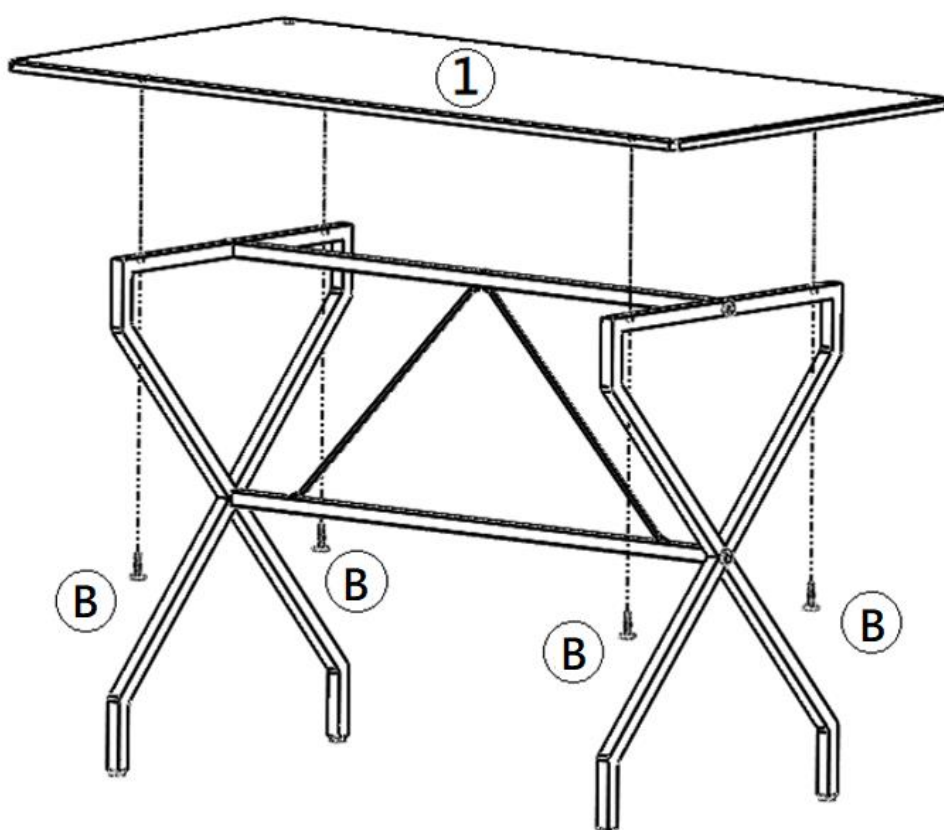


# STEP.5

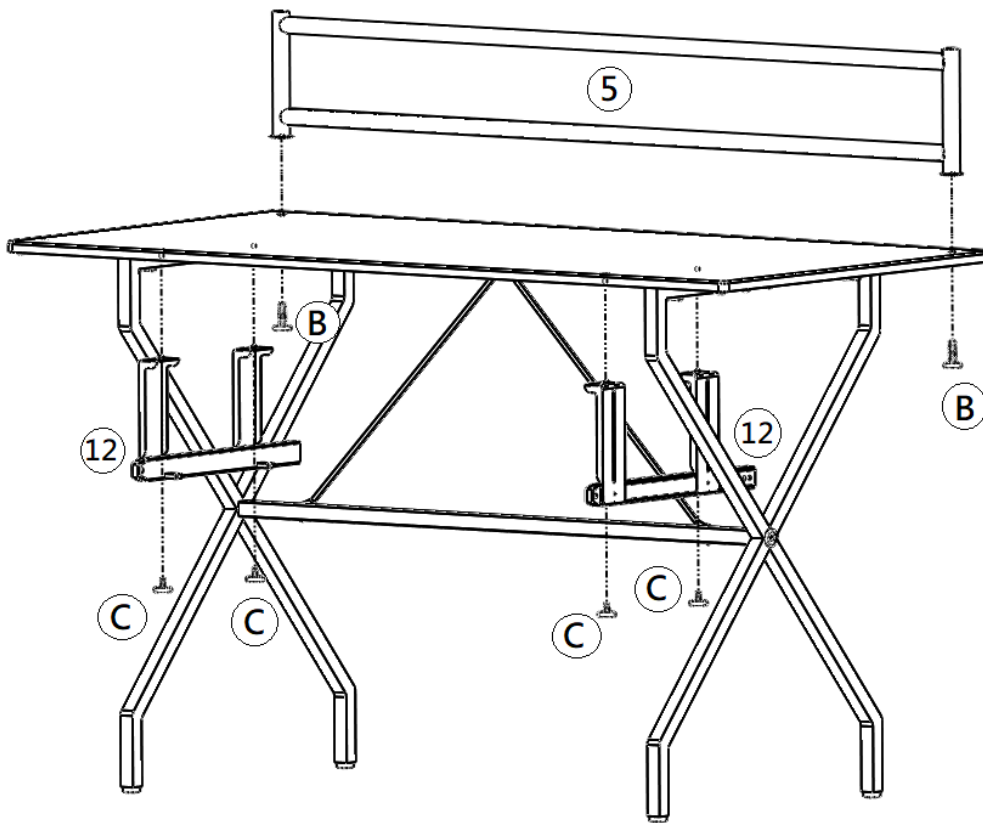


# STEP.6

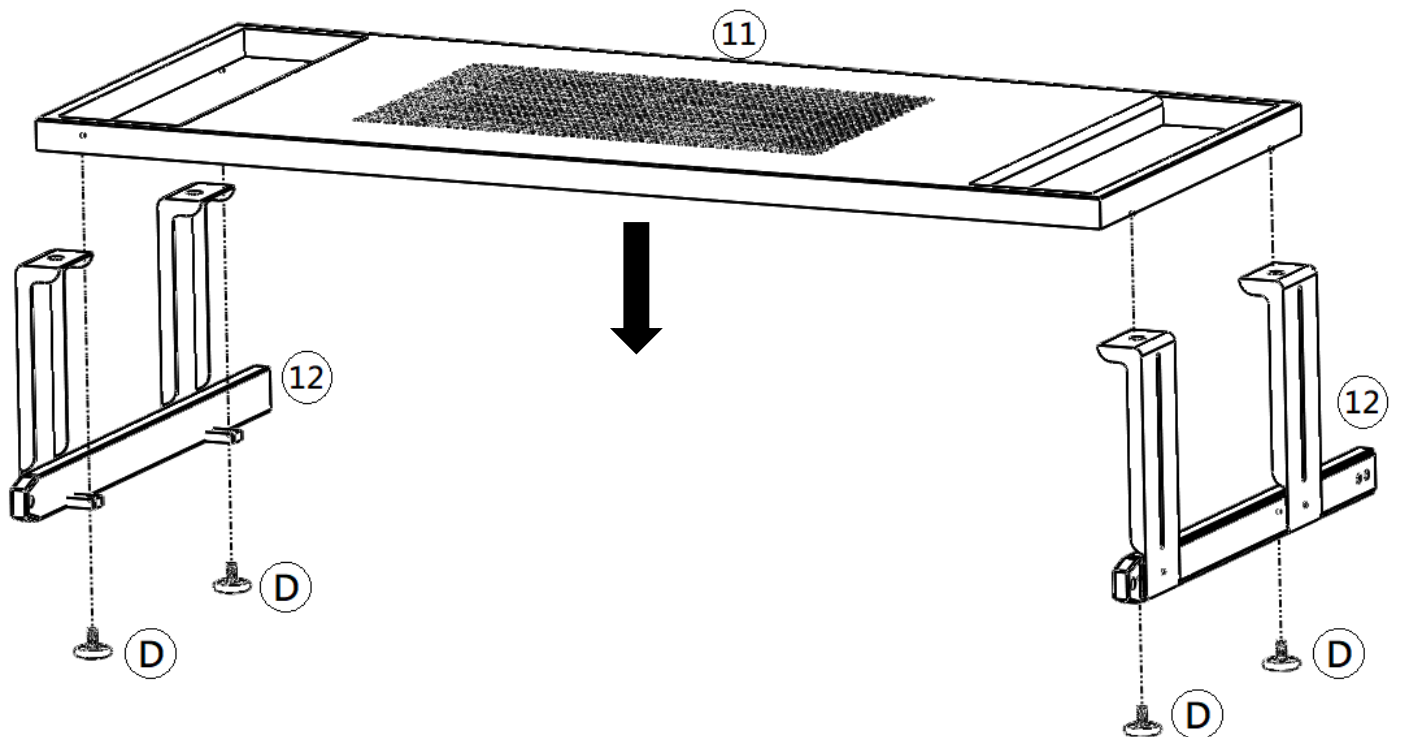

# STEP.7

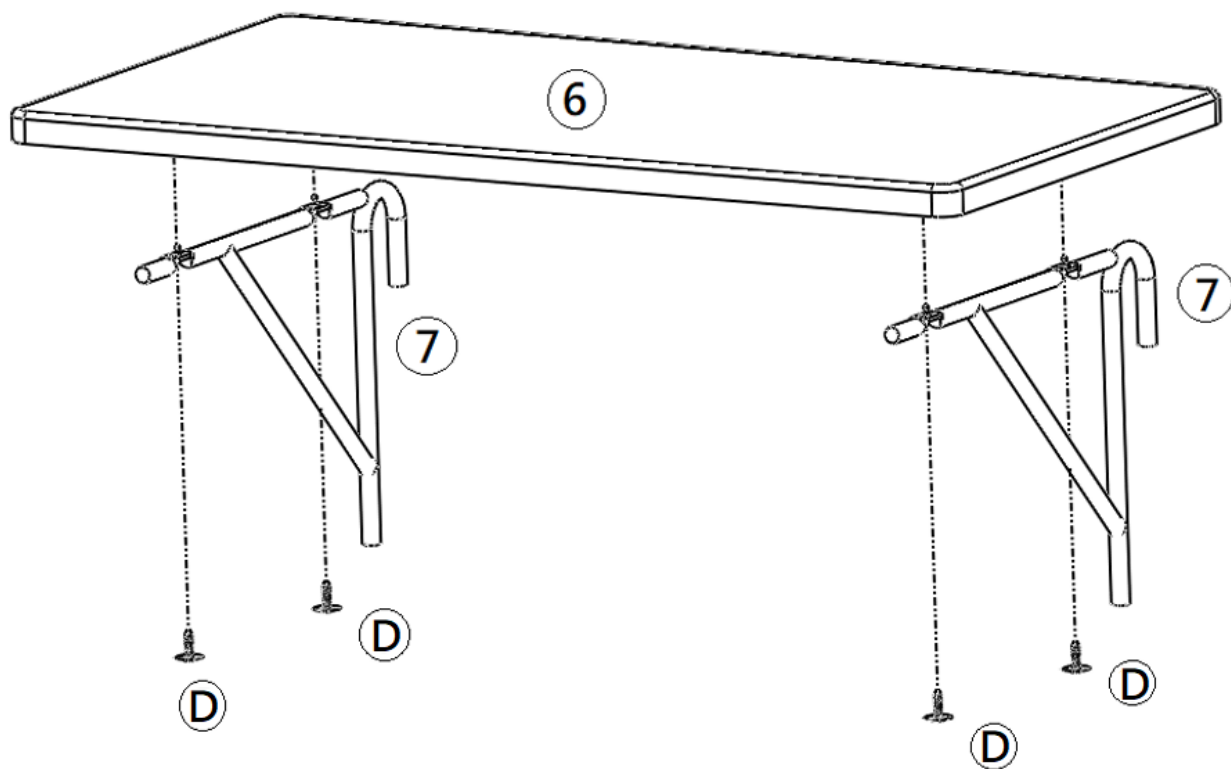

# STEP.8

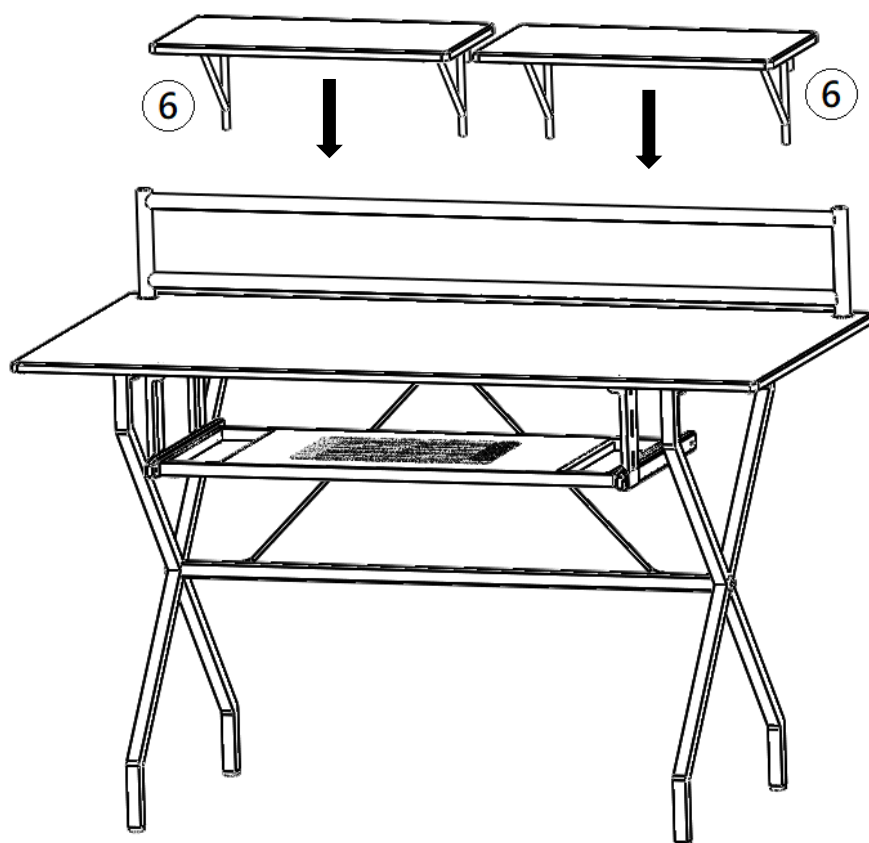

# STEP.9

