






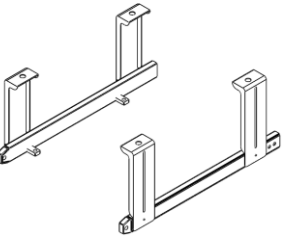
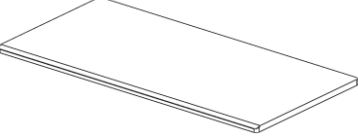
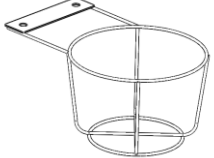
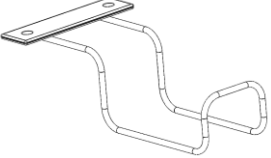
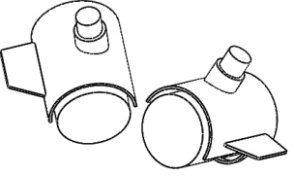
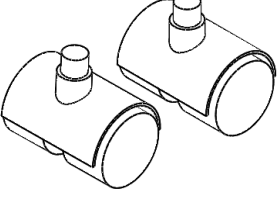
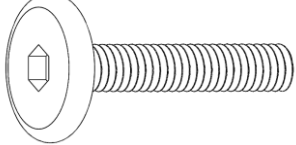
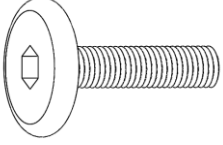
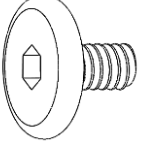
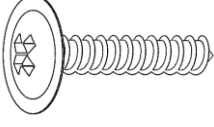
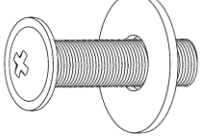



ASSEMBLY INSTRUCTION ACME FURNITURE


MODEL # 92900, 92902, 92904

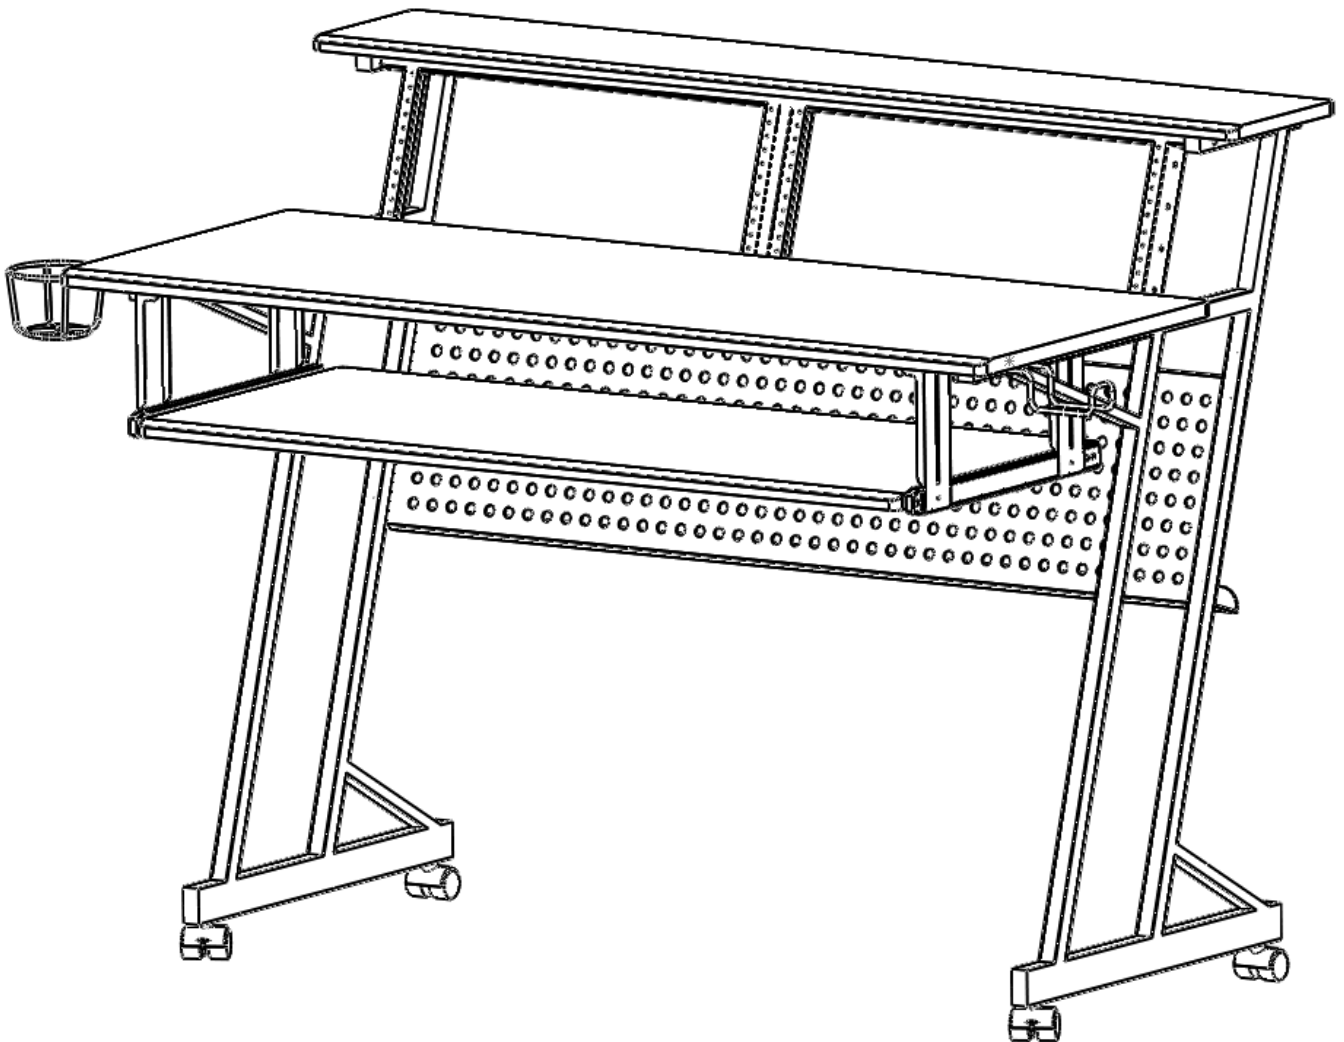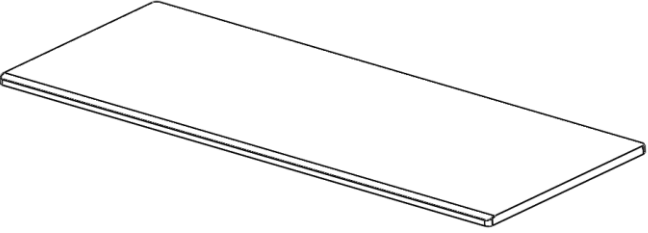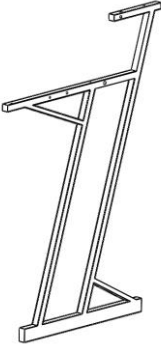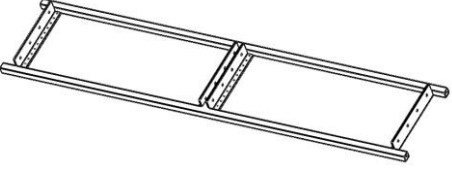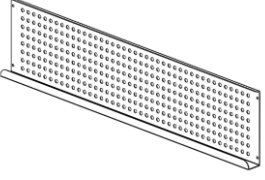


PARTS

<p>1.</p>  <p>X1</p>	<p>2.</p>  <p>X2</p>	<p>3.</p>  <p>X1</p>	
<p>4.</p>  <p>X1</p>	<p>5.</p>  <p>X1</p>	<p>6.</p>  <p>X1</p>	
<p>7.</p>  <p>X2</p>	<p>8.</p>  <p>X1</p>	<p>9.</p>  <p>X1</p>	<p>10.</p>  <p>X1</p>
<p>11.</p>  <p>X2</p>	<p>12.</p>  <p>X2</p>	<p>A.M6x38</p>  <p>X6</p>	<p>B.M6x28</p>  <p>X8</p>
<p>C.M6x12</p>  <p>X8</p>	<p>D.M4x15</p>  <p>X8</p>	<p>E.M5x19</p>  <p>X24</p>	<p>F.</p>  <p>X1</p>


STEP.1

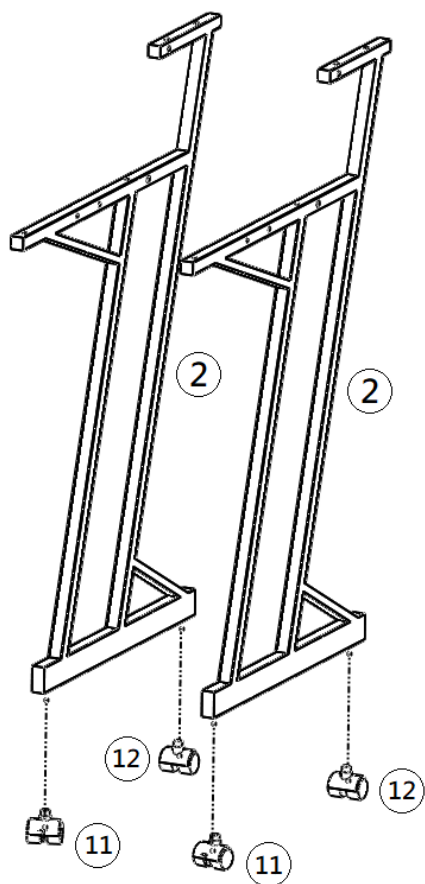


STEP.2

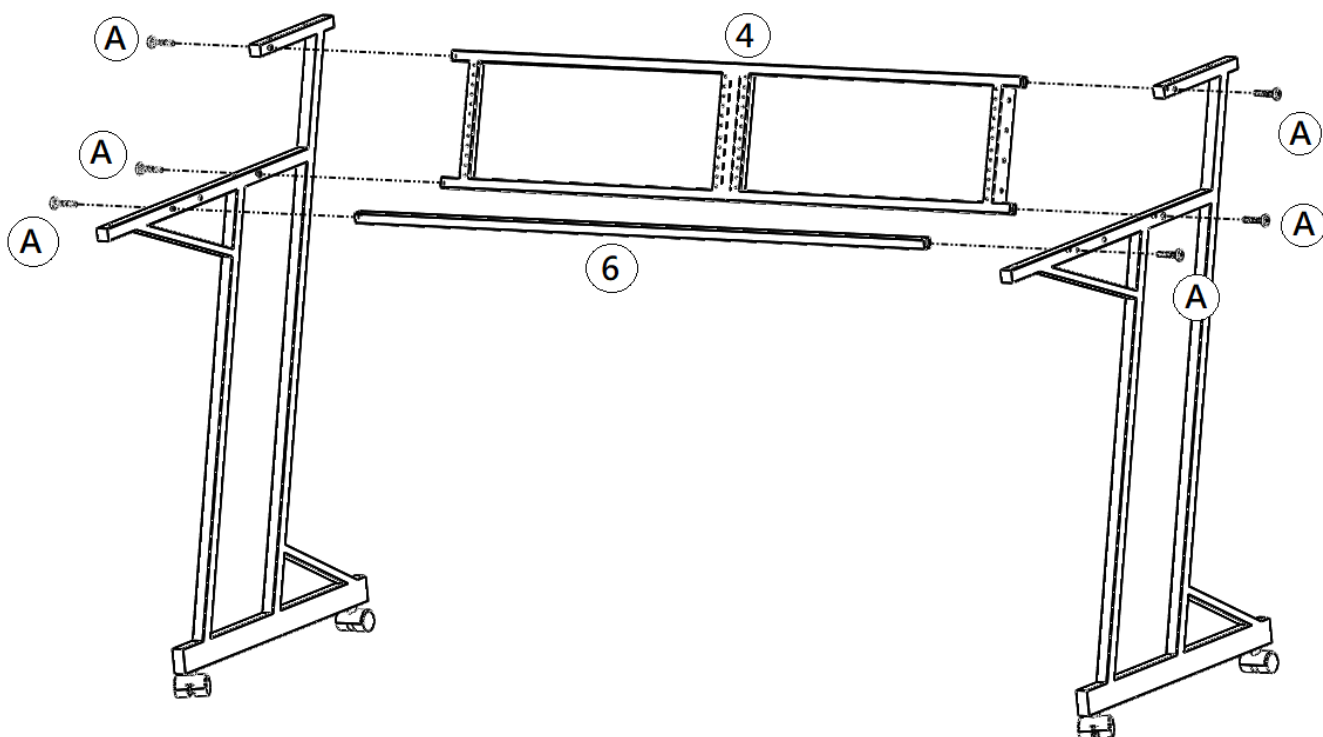


STEP.3

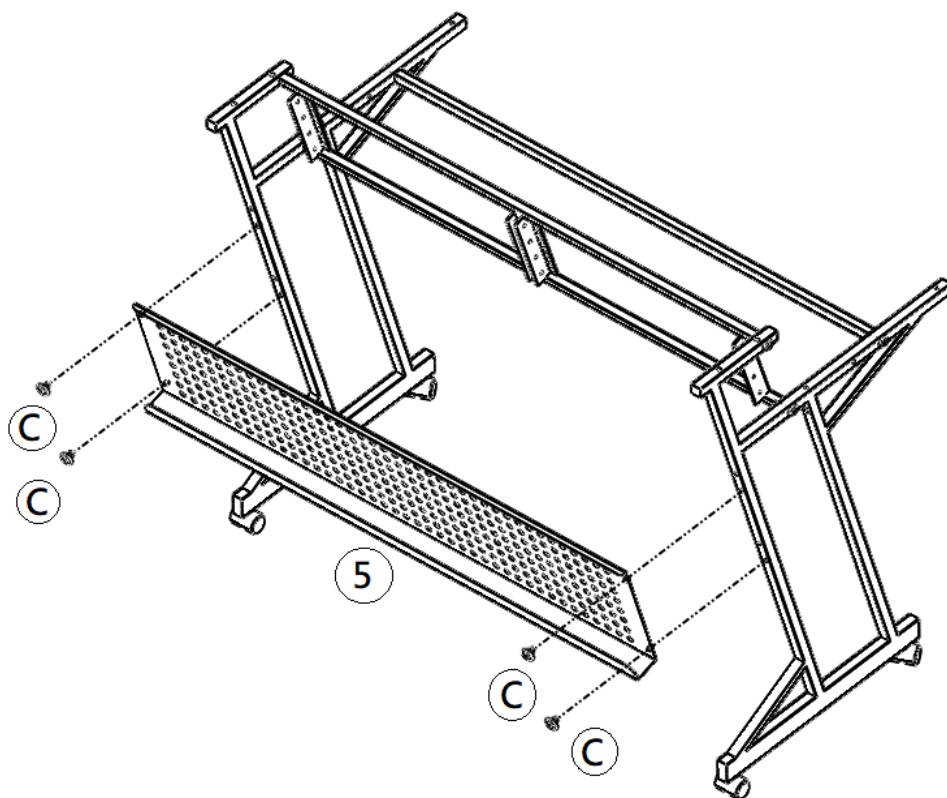


STEP.4

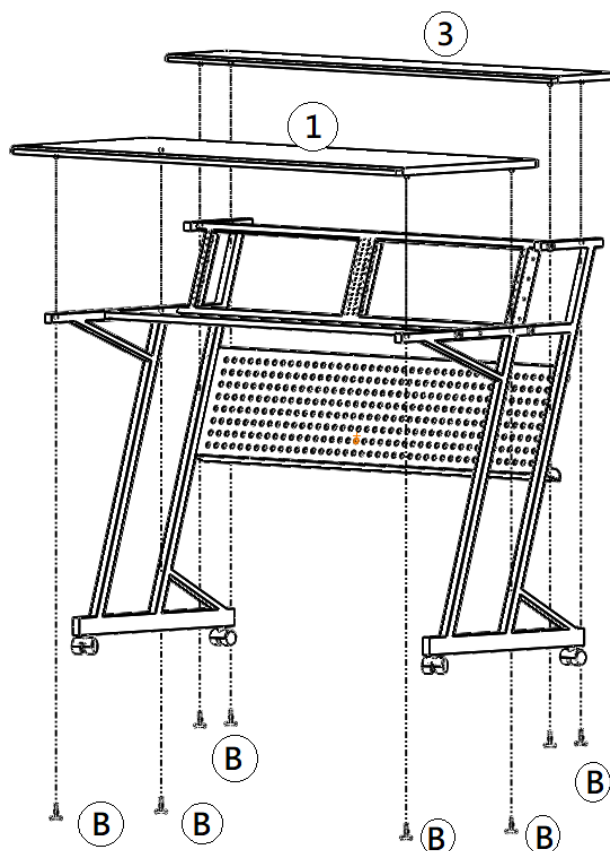


STEP.5

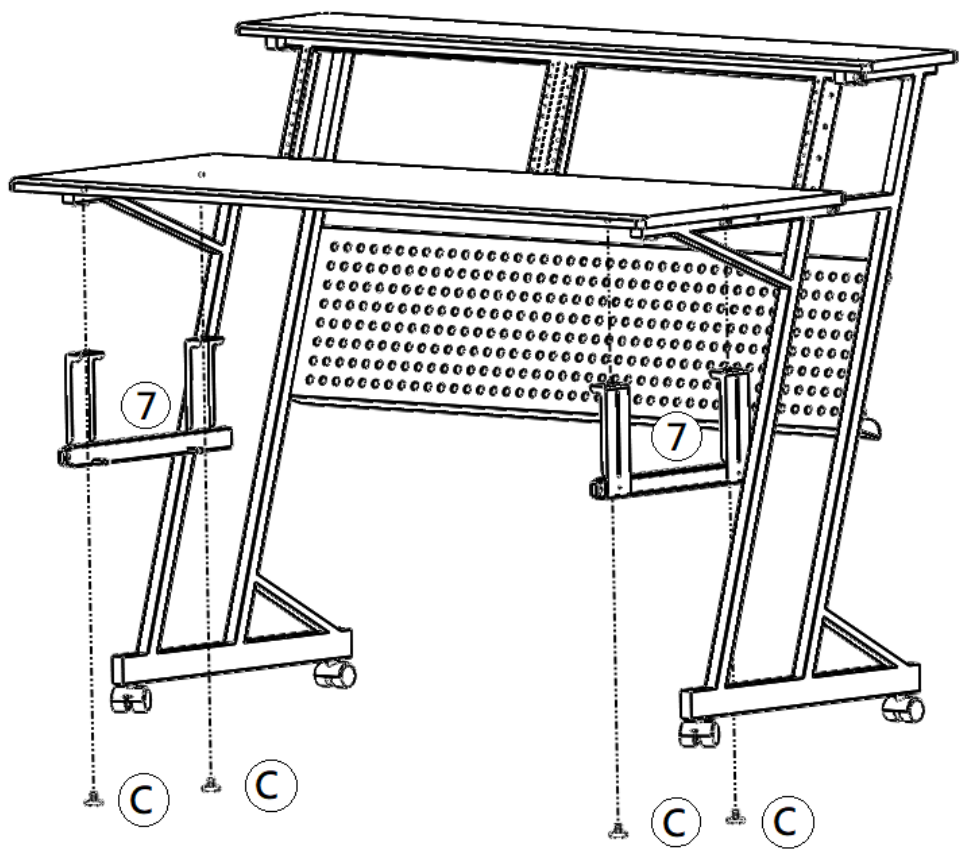

STEP.6

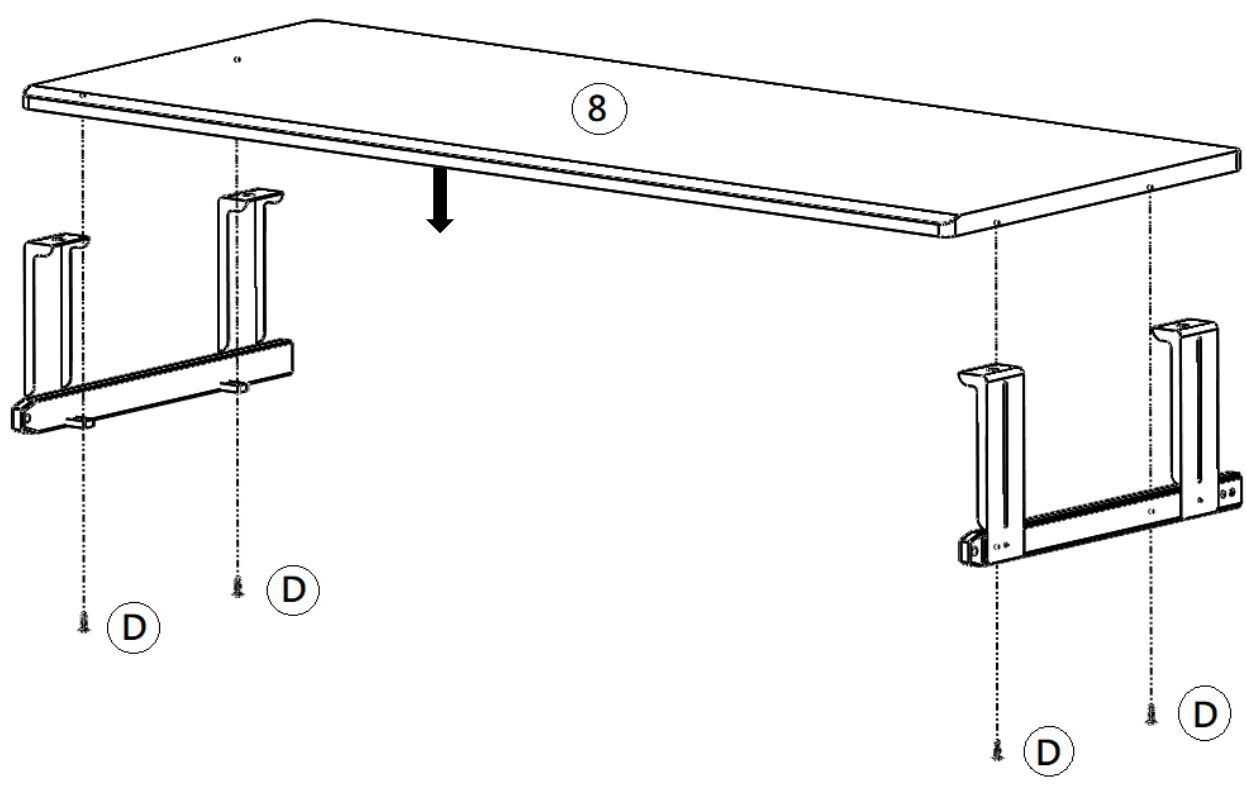

STEP.7

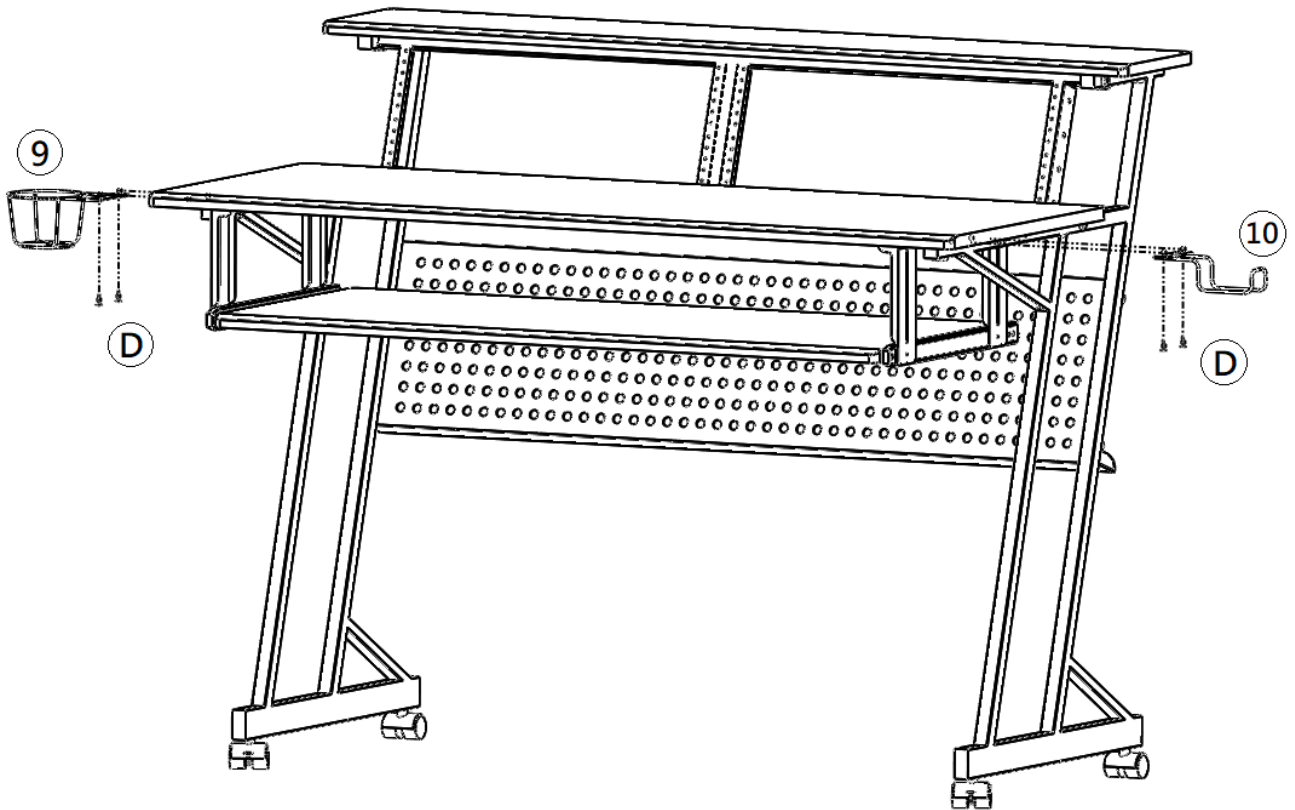

STEP.8

