## **ASSEMBLY INSTRUCTION FOR ACME FURNITURE**

## MODEL:BD00241EK1


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

### \*\*\* Do not fully tighten screws until fully assembled \*\*\*

COMPONENT PARTS					
DESCRIPTION	PART NAME	Q'TY (PCS)			
1	HEADBOARD PANEL	1			
2	LEGS (L)	1			
3	LEGS (R)	1			
(4)	CROSS BAR	1			


### HARDWARE REQUIRED

A	$\bigcirc$	FLAT WASHER	Ø5/16"*19*2mm	8 PCS
B	$\bigcirc$	LOCK WASHER	Ø5/16"*11*1mm	8 PCS
<b>C</b>		BOLT	Ø5/16"*35mm	8 PCS
D		ALLEN KEY	M4	1 PC

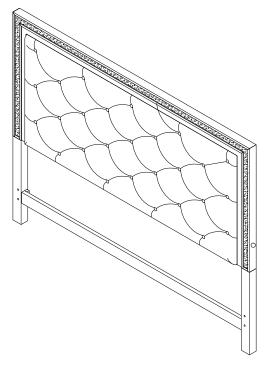

### **Attention**

\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

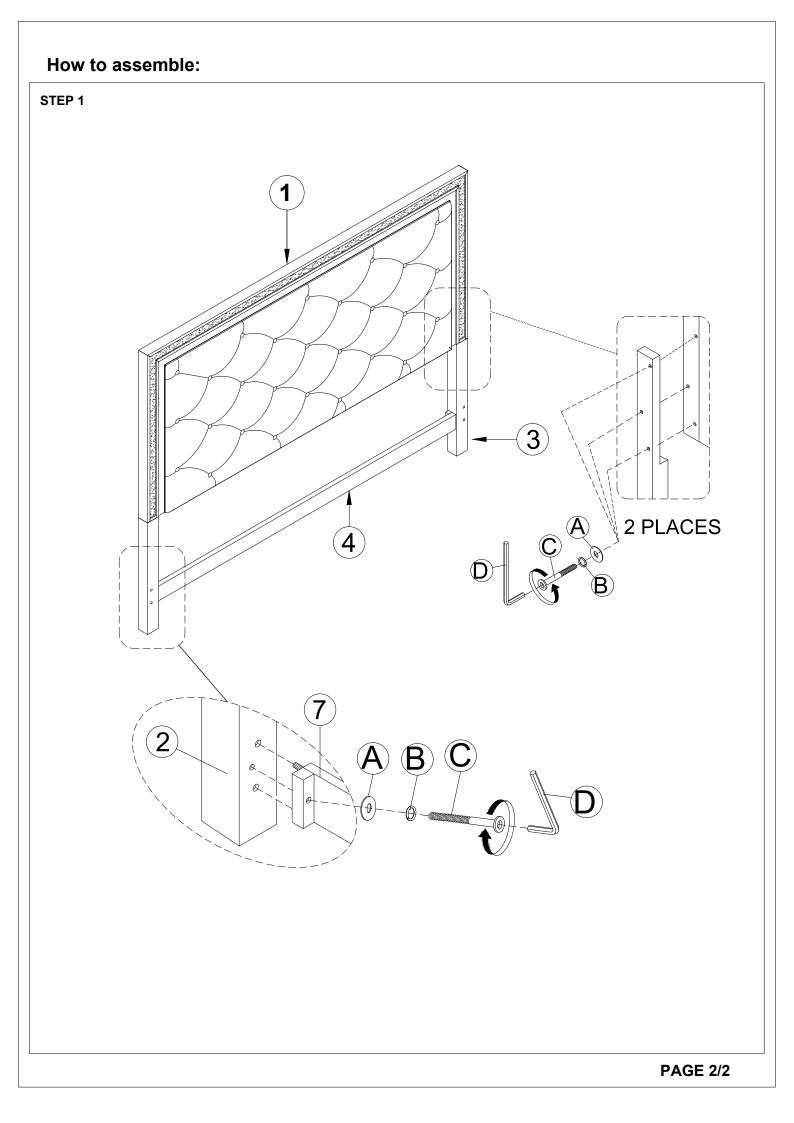

# **ASSEMBLY INSTRUCTION**

## MODEL:BD00241EK1, BD00241EK2, BD00241EK3

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

#### **COMPONENT PARTS** DESCRIPTION PART NAME Q'TY (PCS) $(\mathbf{1})$ **HEADBOARD PANEL** 1 (2) FOOTBOARD 1 (3) RAILS 2 (4) SLAT 1 SET (13PCS) (5) SLAT SUPPORT 10 (6) **BOTTOM PANLE** 1

#### \*\*\* Do not fully tighten screws until fully assembled \*\*\*

# HARDWARE REQUIRED

(7)

SUPPORT LEGS

A		P.H SCREW	M4*35mm	26	PCS	
B	Ð	HALF MOON	Ø5/16"*30*8mm	8	PCS	
<b>C</b>		HEX NUT	Ø5/16"*12*6mm	8	PCS	
D	(1)))))))))))))))))))))))))))))))))))))	BOLT	Ø5/16"*90mm	8	PCS	<b>S</b>
E		SPANNER WRENCH	M12	1	PC	
F		BOLT	Ø1/4"*35mm	6	PCS	
G	G	LOCK WASHER	Ø1/4"*11*1mm	6	PCS	
$(\mathbf{H})$	$\bigcirc$	FLAT WASHER	Ø1/4"*19*2mm	6	PCS	
		ALLEN KEY	M4	1	PC	

### Attention

\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

3

## **ASSEMBLY INSTRUCTION FOR ACME FURNITURE**

### MODEL:BD00241EK1, BD00241EK2, BD00241EK3


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

COMPONENT PARTS					
DESCRIPTION	PART NAME	Q'TY (PCS)			
8	DRAWER FRONT		2		
9	BACK PANEL OF DRAWER		2		
10	SIDE PANEL OF DRAWER (LEFT)		2		
(1)	SIDE PANEL OF DRAWER (RIGHT)	e	2		
(12)	BOTTOM PANEL OF DRAWER		2		
13	BOTTOM SUPPORT OF DRAWER	Ð	2		

### \*\*\* Do not fully tighten screws until fully assembled \*\*\*

## HARDWARE REQUIRED

J		PHILLIPS SCREW	Ø5/32"*25mm	4	PCS
K	Callengerer	SCREW	M4*35mm	16	PCS
L		PLASTIC ANCHORS	44*12*10mm	8	PCS
M	$\mathcal{O}$	HANDLE		4	PCS

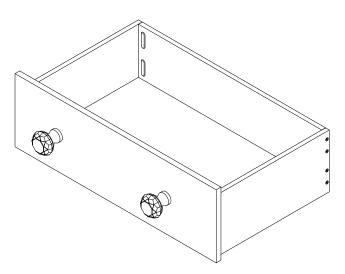

### Attention

\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

