






ASSEMBLY INSTRUCTION FOR ACME FURNITURE






LV01160-1/-2/-3

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may come loose inside the carton during shipment. Identify and count all parts and metal hardware. Compare with the part list to be sure all parts are present, If any part(s) are missing or damage, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

****Assemble the product on a flat, soft surface such a carpet or cloth to prevent scratching the product finish. Read all instruction and study the drawing carefully before starting the assembly process.**




***Do not fully tighten screws until fully assembled**

PART LIST			
NO	PART	DECS	QTY
A		2-SEATER	1
B		3-SEATER	1
C		CONNER	1
D		LEG	13
E		PILLOW	4

HARDWARE LIST			
NO	HARDWARE	DECS	QTY
1		BOLT	26PCS
2		Φ8mm FLAT WASHER	26PCS
3		SCREW	26PCS
4		Φ6mm FLAT WASHER	26PCS
5		ALLEN WRENCH	1PC

STEP 1. Attach the legs to the bottom of base

STEP 2. Combine the sofa sets

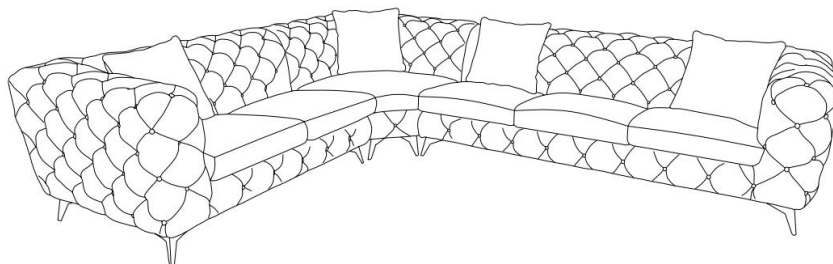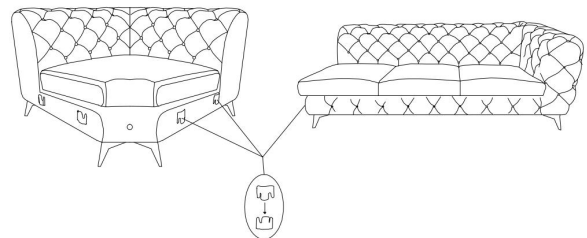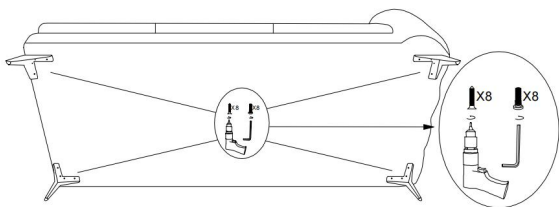

*****Some number parts listed on the instruction sheet may not be in parts bag as they may be assembled. Carefully check parts and packing materials prior to ordering replacements. *****

MADE IN CHINA